

TeleScoop^{Pro}

The new standard in Environmental & Industrial sampling

The all new TeleScoop Pro is perfect for sampling liquids and suspensions.

The lightweight aluminium telescopic rods can be easily extended to the ideal length. A wide range of fittings can be quickly connected to ensure effortless sampling.

All the fittings are interchangeable with the telescopic rods.

All you need to do is:

1. Choose your Telescopic Rod
2. Choose your attachments




1. Telescopic Rods

- Wide range of sizes
- New improved robust design
- Quickly extends to the required length in seconds
- Lightweight



Code	Description	Length	Number of Sections	Material	Price
SAM1002	Telescopic Rod 1000mm	1000mm	1	Aluminium & plastic	€28.08
SAM1052	Telescopic Rod 1200mm	720 to 1200mm	2	Aluminium & plastic	€22.46
SAM1054	Telescopic Rod 2500mm	1320 to 2500mm	2	Aluminium & plastic	€28.08
SAM1060	Telescopic Rod 2800mm	1020 to 2800mm	4	Aluminium & plastic	€46.33
5065A-3001	Telescopic Rod 3000mm	1230 to 3000mm	3	Aluminium & plastic	€46.33
SAM0132	Telescopic Rod 4500mm	1720 to 4500mm	3	Aluminium & plastic	€60.40
SAM1062	Telescopic Rod 6000mm	1820 to 6000mm	4	Aluminium & plastic	€78.70

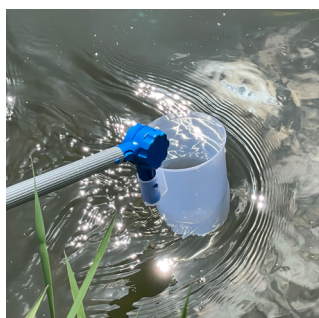

**FAST
EASY
SAMPLING**

2. TeleScoop Pro Attachments



Angular Beaker 5065B

The beaker can be easily adjusted to the required angle



Stainless Beaker

Sampling beaker made from 316L stainless steel



Pendulum Beaker 5065C

Always swings to the upright position



Snapper

For collecting sediment samples from river beds.

Spring loaded cup to trap sediment



Bottle Holder 5065D

Suitable for bottles up to 95mm diameter. Price includes one 1000ml LDPE bottle



Deep Catch Net 5065N

190 x 430mm



Wrist Strap 3111A

Ensures that you do not lose the sampler if accidentally dropped!



Surface Net 5065M

310 x 280mm

Code	Description	Nominal Volume	Material	Price
SAM1128	Angular Beaker	500ml	PP	€36.87
SAM1144	Angular Beaker	1000ml	PP	€40.77
SAM1146	Angular Beaker	1000ml	316L Stainless Steel	€137.00
SAM1156	Pendulum Beaker	500ml	PP	€37.25
SAM0133	Pendulum Beaker	1000ml	PP	€40.76
SAM1158	Pendulum Beaker	1000ml	316L Stainless Steel	€187.00
SAM1262	Bottle Holder	500ml	HDPE/PP Bottle	€49.40
SAM1264	Bottle Holder	1000ml	HDPE/PP Bottle	€52.00
SAM1266	Bottle Holder	500ml	316L Stainless Steel Bottle	€176.00
SAM1318	Spare Bottle	500ml	HDPE body with PP lid. Box of 48	€74.90
SAM1320	Spare Bottle	1000ml	HDPE body with PP lid. Box of 24	€71.37
A836500	Spare Bottle	500ml	316L Stainless Steel	€270.00
SAM1534	Snapper	250ml	Stainless Steel	€449.00
SAM1536	Surface Catch Net	310 x 280mm	Polypropylene & Polyamide	€102.00
SAM1538	Deep Catch Net	190 x 430mm	Polypropylene & Polyamide	€111.00
SAM1540	Wrist Strap			€15.39

Remember to buy the telescopic rods 250ml and 2000ml attachments coming later in 2022. Please contact us.

7 Reasons to choose the NEW TeleScoop^{Pro}



Our Revolutionary
Quick Connect System



1. Quick Connect System

Our new quick connect system enables the attachments to be changed in seconds. No tools are needed.

2. Stronger

Our new Telescopic Rods are much stronger than before consequently they bend less during use.

3. More Choice

Now available with an even wider range of fittings and extension poles.

4. Twin Lock Telescopic Rods

The Telescopic Rods now have a double action locking system which makes the rods even more secure and easier to use.

5. Better Value For Money

We have invested in huge amounts of stock. This means that we have been able to reduce our prices whilst improving the quality and specifications.

6. Better Quality Material

The stainless steel beakers are now made from 316L stainless steel. This gives extra chemical resistance compared to standard sampling beakers.

7. Superior Multi Position Elbow

Our multi-position elbow adapter allows the attachment to be adjusted to the perfect angle. No tools are required.

TeleScoop^{Pro} setting the standard