



# Safety Eyewear

uvex

phynomic plus  
MADE IN GERMANY

CE 0019

EN 166

EN 170

# uvex i-gonomics

## Measurable stress reduction for safety goggles

The innovative uvex i-gonomics product system sets new standards in ergonomics, delivering perfect fit, light weight and optimum temperature. Goggles are comfortable and remain fog free even during periods of physical exertion which increases wearer well-being and enables you to get on with the job at hand.

# uvex u-sonic



The uvex u-sonic innovative soft seal adapts to the face for a customised, non-irritating fit without pressure points. The unrivalled anti-fog lens coating ensures that the compact wide-vision goggle boasts an impressive RI value of 4.40 in comparison with other wide-vision safety eyewear.



### force

- Test method: tensile force of headband\*
- Test result: seal pressure: 21 N (IV 4.2)

- Perfect fit without any irritating pressure points




\* independently tested by the Chemnitz Technical University

## Relief-Index


# 4.40

The relief index is calculated using the mean value of the three index values (IV) for force, weight and temperature – ranging from 0 (= poor) to 5 (=perfect).

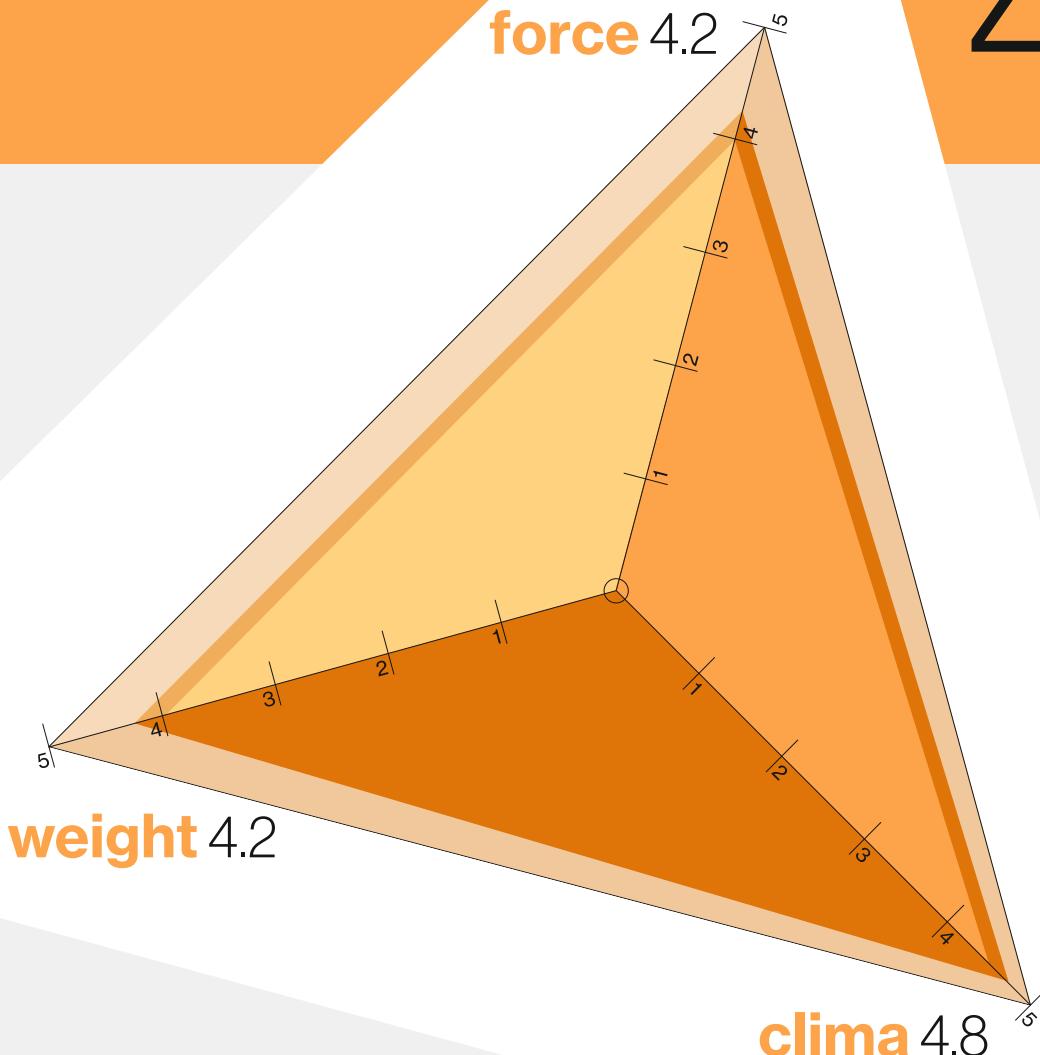

### weight

- Test method: weighing the product
- Test result: product weight = 69 g (IV 4.2)
- Comfortable to wear, reducing onset of fatigue

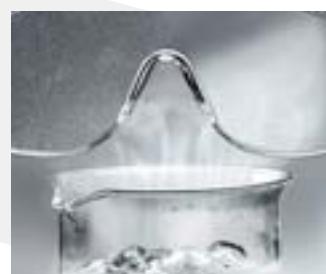


### clima

- Test method: uvex "Anti-fog" benchmark test
- Test result: AntiFog performance = 29 points (IV 4.8)
- Fog-free view even under extreme conditions



## dry 0% LF

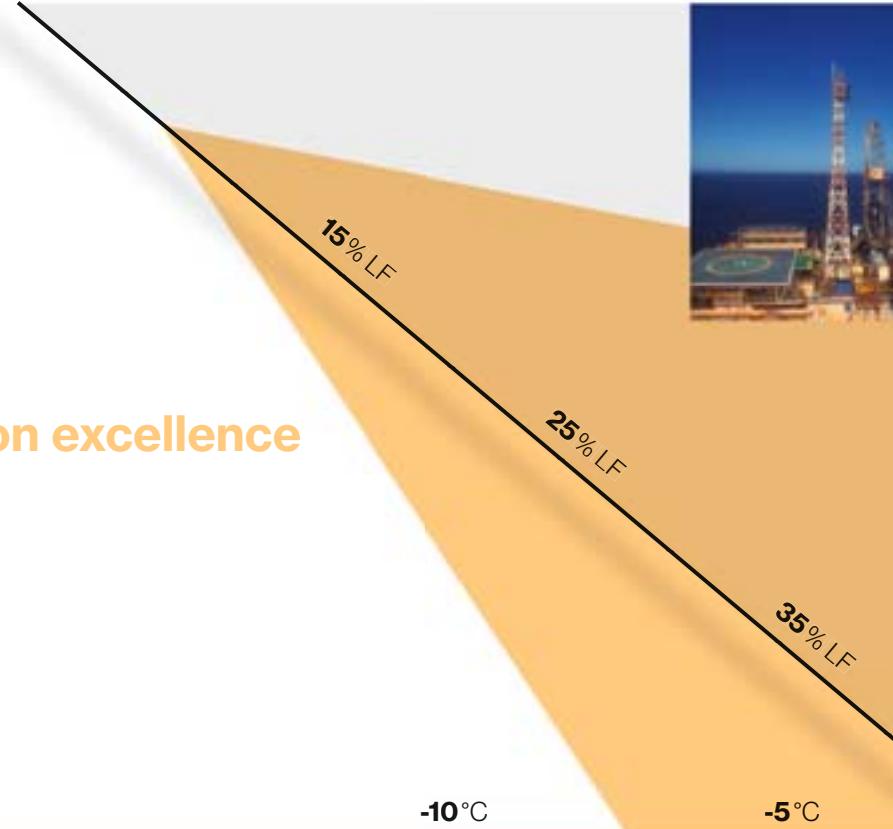

## uvex supravision excellence

## cold -20 °C



## uvex supravision plus

### Core Coatings



#### uvex supravision sapphire

Coated lenses are extremely scratch resistant on both sides and offer excellent resistance to chemicals. The coating system, which has been enhanced using nanotechnology, offers significantly increased non-stick properties and subsequently are easier to clean. Aqueous and oily dirt can be removed effortlessly.



#### uvex supravision excellence

Coated lenses are anti-fog (for at least 16 seconds) on the inside, while the outside offers extreme scratch and chemical resistance. The anti-fogging properties are permanent even after repeated cleaning. The lenses are also easy to clean and less susceptible to dirt due to the non-stick nanotechnology.




#### uvex supravision plus

Coated lenses have advanced anti-fog performance (at least 30 seconds) on both sides, scratch-resistant and antistatic. The anti-fogging properties are permanent, even after being repeatedly cleaned. This lens coating is suitable for areas with high humidity.

# dirty

## Coating technology

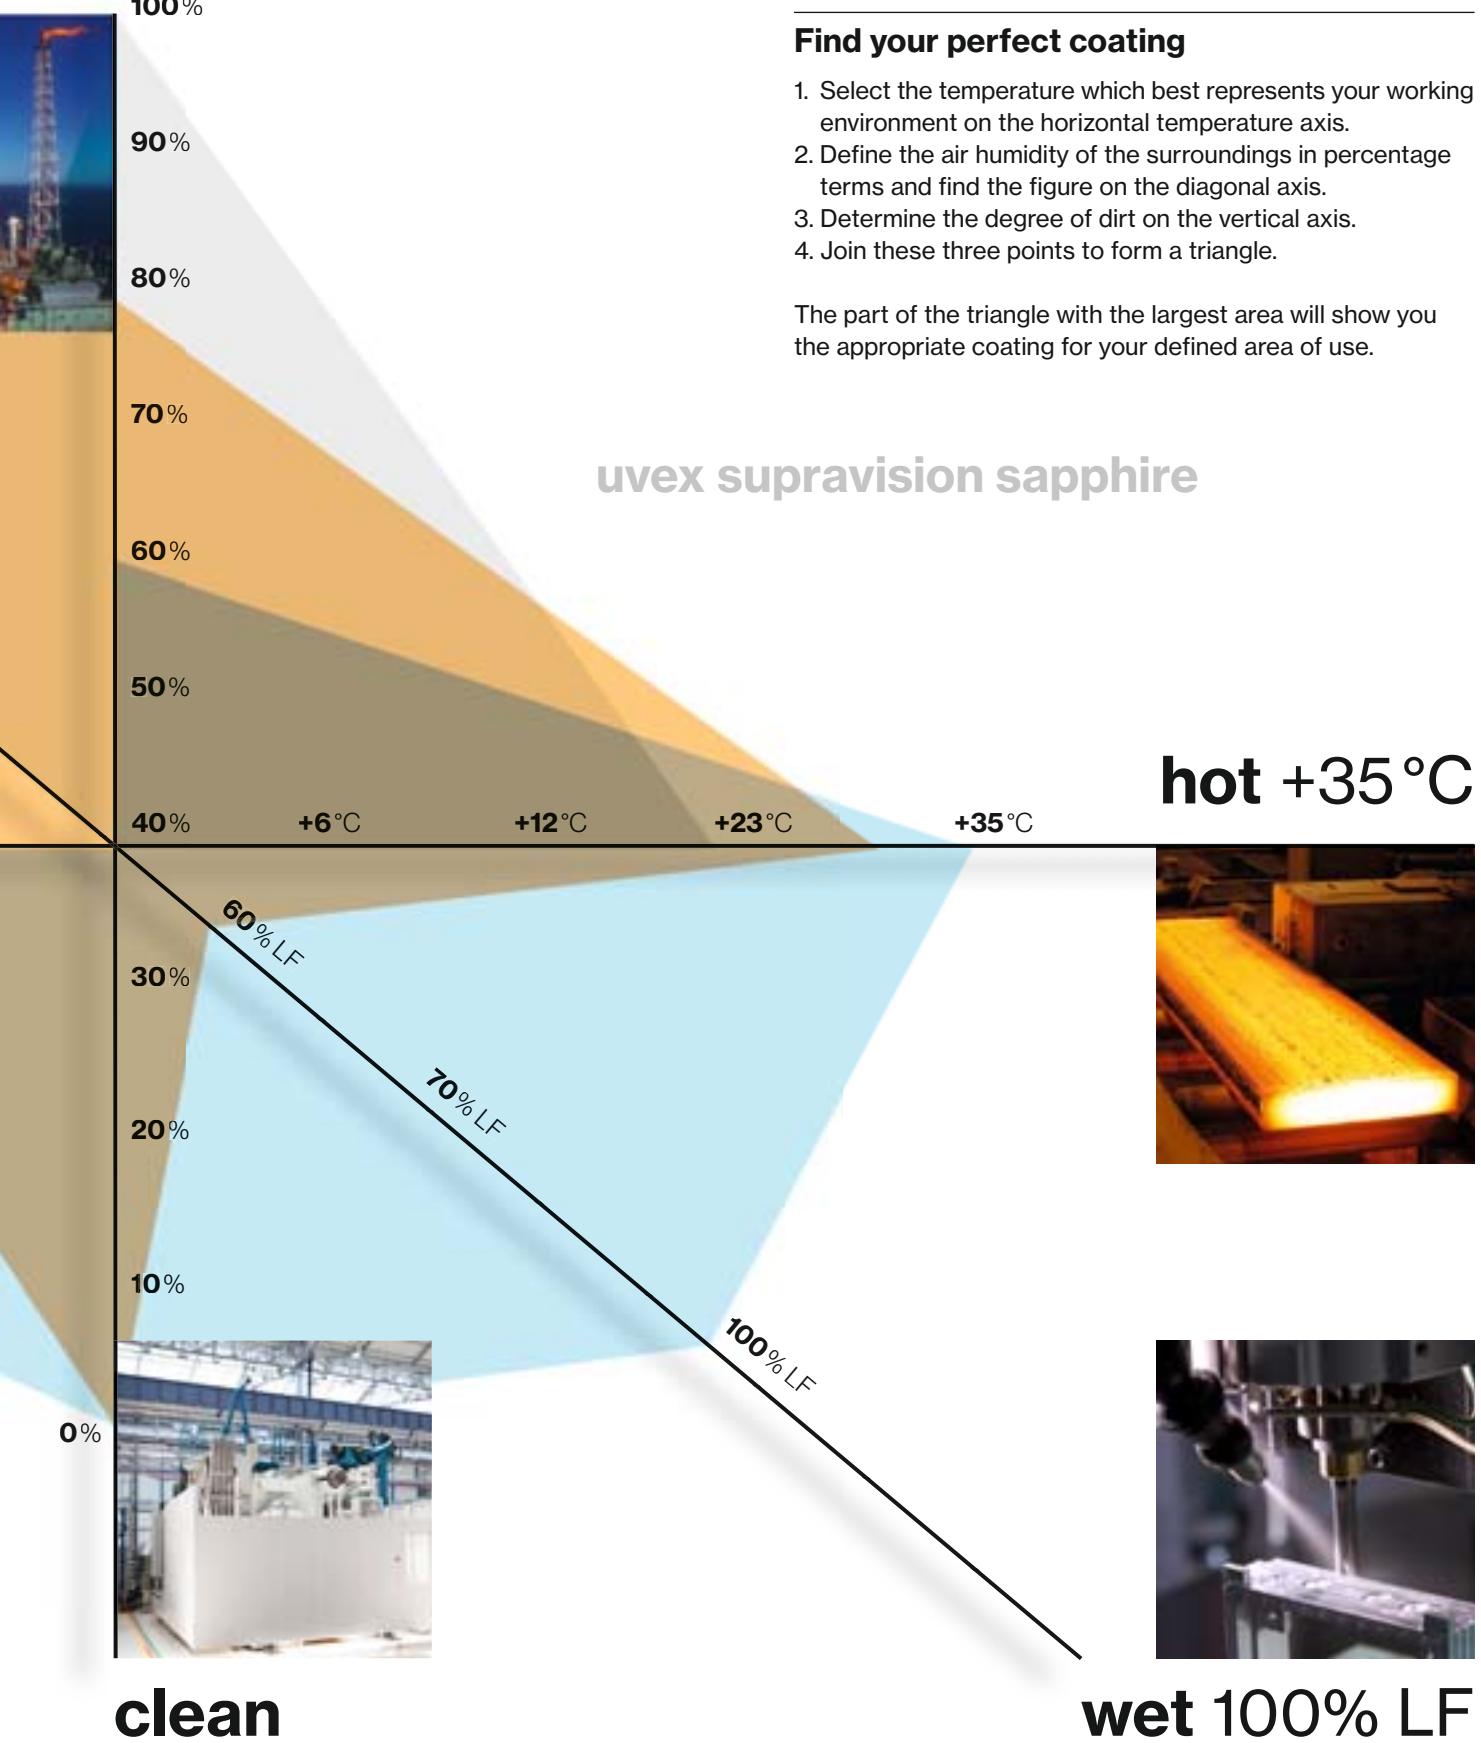

# Special coatings



## **uvex supravision extreme**

Coated lenses are scratch-resistant on the outside and permanently anti-fog on the inside. Lenses will not fog up as the coating never reaches the point of saturation. Ideally suited for workplace environments with long-lasting exposure to condensation and a high degree of dirt.



## **uvex supravision variomatic**

Coated lenses are self-tinting filters, which automatically become darker when exposed to UV (within 10 seconds) and become lighter when exposure is reduced (after 30 seconds). Now available with the tried and tested uvex supravision excellence technology (permanently anti-fog on the inside and extremely scratch-resistant on the outside). Particularly suitable for workplaces where you frequently move between indoor and outdoor environments, from light to dark.



## **uvex supravision clean**

Coated lenses are autoclavable and resistant to chemicals. Anti-fog on the inside, extremely scratch-resistant on the outside. The anti-fog properties last for at least 10 autoclave cycles. The coating ensures complete fog protection and maximum vision.



## **uvex infradur**

Coated lenses are scratch-resistant on both sides and minimise damage from welding sparks.

## **uvex infradur plus**

Coated lenses are anti-fog on the inside, extremely scratch-resistant on the outside and minimise damage from welding sparks.

## Lens tinting Characteristics

### CLEAR



Protection: UV/marketing: 2(C)-1.2  
Transmission: approx. 91%  
Standards: EN 166, EN 170  
**Anti-glare mechanical hazard protection**

### AMBER



Protection: UV/marketing: 2(C)-1.2  
Transmission: approx. 88%  
Standards: EN 166, EN 170  
**Anti-glare mechanical hazard protection with contrast adjustment**

### LIGHT BLUE



Protection: UV/marketing: 2(C)-1.2  
Transmission: approx. 85%  
Standards: EN 166, EN 170  
**Protection offering relaxing, focussed vision**

### AR (anti-reflective)



Protection: UV/marketing: 2(C)-1.2  
Transmission: approx. 96.5%  
Standards: EN 166, EN 170  
Optimum **anti-reflective** protection with high degree of light transmission

### SILVER MIRROR 53 %



Protection: UV/marketing: 5-1.7  
Transmission: 53%  
Standards: EN 166, EN 172  
**Protection in changing light conditions**

### SILVER MIRROR 12 %



Protection: UV/marketing: 5-3.1  
Transmission: 12%  
Standards: EN 166, EN 172  
**Protection from both highly artificial and natural glare conditions**

### POLAVISION



Protection: UV/marketing: 5-3.1  
Transmission: 14%  
Standards: EN 166, EN 172  
**Reduction of irritating surface reflection by filtering scattered light**

### GREY 14% / GREY23 %



Protection: UV/marketing: 5-3.1/5-2.5  
Transmission: 14%/23%  
Standards: EN 166, EN 172  
**Protection against natural glare with signal colour recognition**

### BROWN



Protection: UV/marketing: 5-2.5  
Transmission: 20%  
Standards: EN 166, EN 172  
**Protection against natural glare with signal colour recognition and increased contrast effect**

### VARIOMATIC



Protection: UV/marketing: 5-1.1<2  
Transmission: 12-86%  
Standards: EN 166, EN 172  
Fast accommodation of changing UV irradiation conditions: automatic lens darkening (10 s) and lightening (30 s)

### WELDING PROTECTION, GREY



Protection: UV/welding shades: 1.7/3/4/5/6  
Transmission: 1 - 43%  
Standards: EN 166, EN 169  
**Protection against IR and UV irradiation (glare) with perfect colour recognition**

### UV PROTECTION



**uv-ex** = ultraviolet excluded  
Direct integration of UV absorption filters in the raw material 100% protection against UV irradiation up to 400 nm. All uvex lenses offer 100% UVA, UVB and UVC protection.

# Safety spectacles – matching your corporate identity

## Eye protection with “personality”

Give your team an unmistakeable image: uvex safety glasses offer various options for individual design – from printing your company's logo on the side arms to frames in your company's colours. You can coordinate your protective equipment perfectly with your corporate identity.

### Frames in the company colours

“Your” safety spectacles are recognisable at first glance: the frames are designed in your company colours.



### Insert in the side arms

Adding your company name to the soft components of the side arms is bespoke and subtle.



### Pad printing on the side arms

(1 to 4 colours)

The direct pad printing process is recommended for printing your logo in colour on the side arms.



### How individual can you be?


We are happy to advise you personally on the technical options for customising our safety glasses. You can also use our online product configuration tool at [www.uvex-safety.com/configurator](http://www.uvex-safety.com/configurator)

(or scan the QR code).

You can choose and design the required spectacles model online here.

Please note that the following minimum quantities must be ordered:

- Pad printing – minimum of 500 pairs
- Insert/customised corporate colouring/individual headband/laser engraving – minimum of 5,000 pairs
- Customised accessories on request

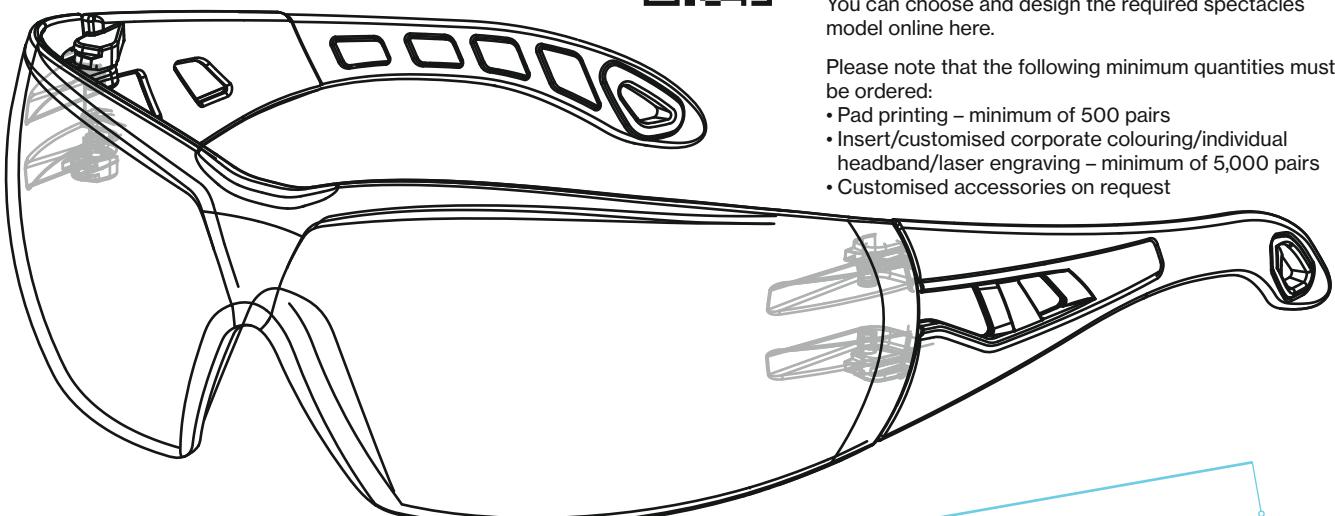

### Customised accessories

Have your logo printed on your spectacle case.



### Laser engraving on the lens

Safety spectacles will retain 100% of their functionality even with customised laser engraving.




### Headband embroidery

Customise your spectacles by having your corporate logo embroidered on the headband.




# Labelling and norms

## Marking on frame

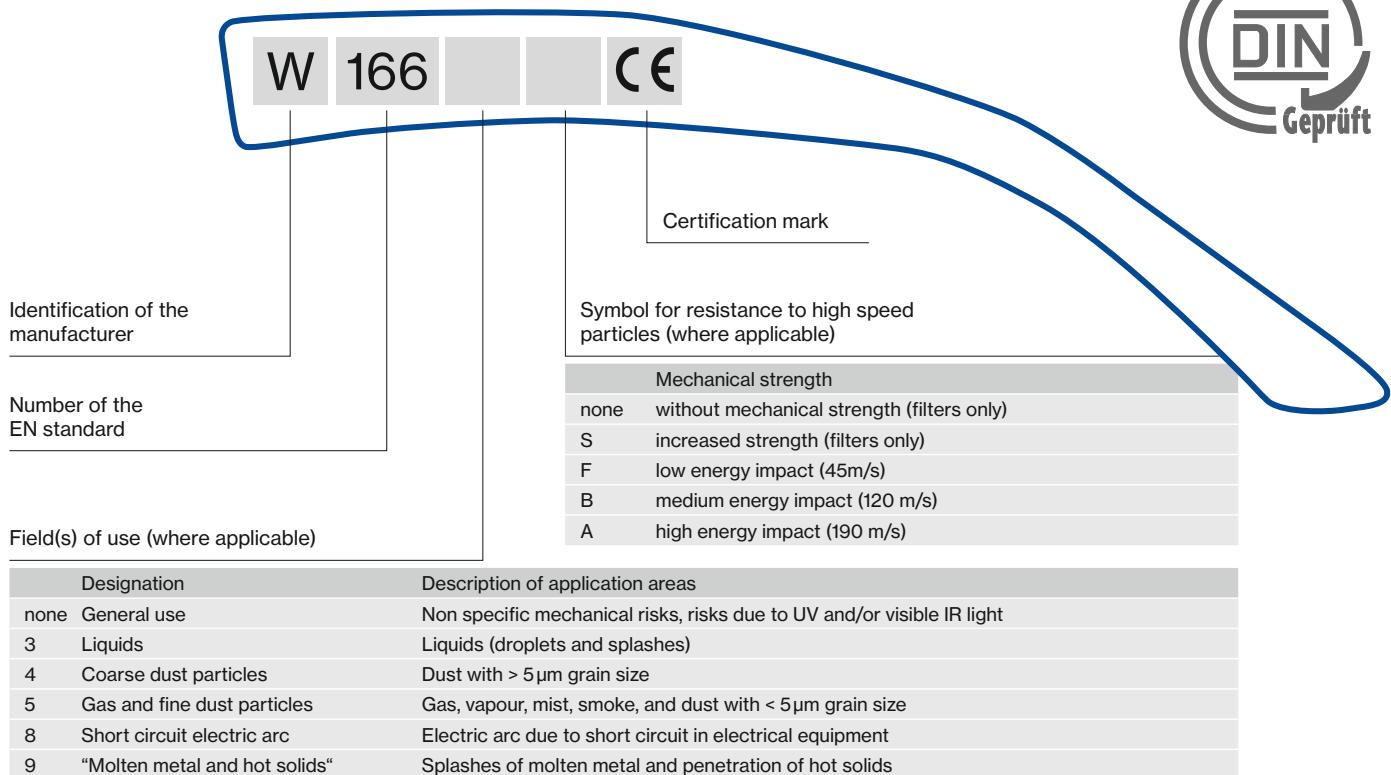

## Marking on lens

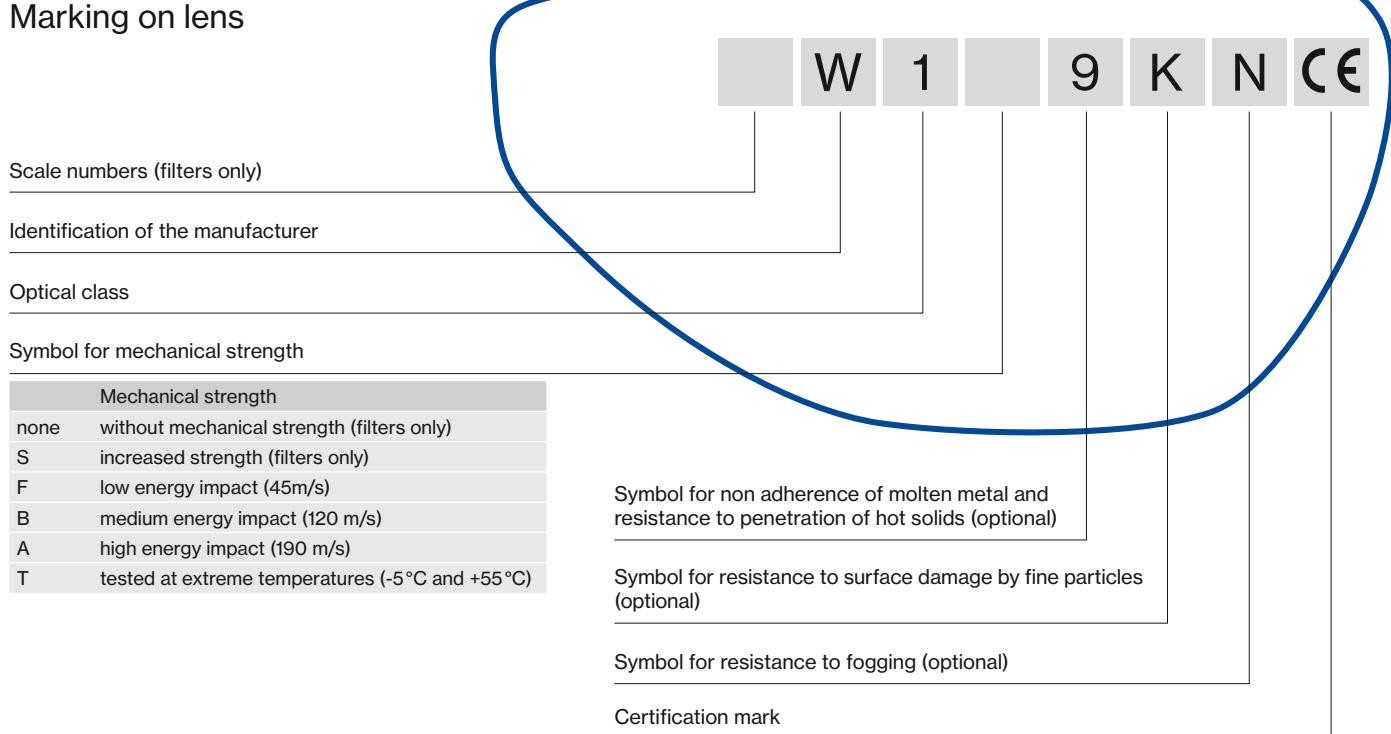

# uvex sportstyle

23 g, 100% performance

Whatever your industrial workplace environment the uvex sportstyle delivers the perfect combination of performance, safety and style. The distinct close fitting athletic design, unrivalled uvex scratch resistant and anti-fog lens coating technology provides a wide field of vision. The ergonomic fit and extra soft, adjustable noise piece enables wearers to achieve a comfortable customised fit, throughout the day.



**Also available with sun protection**  
in a sporty design (UV 400).

## Outstanding wearer comfort

due to uvex duo component technology and the extremely soft.

**A genuine lightweight**  
at only 23 g.



**Scratch-resistant outside, anti-fog on the inside**  
thanks to uvex supravision extreme coating.

**Perfect fit**  
for various head shapes.

**Optimal vision**  
with innovative lenses.



# Safety Spectacles

uvex sportstyle



9193.376



9193.216



9193.226



9193.277

## uvex sportstyle · 9193

Style without compromise

- Adjustable, soft nose piece for a comfortable, customised fit
- At just 23g, low weight and comfortable. Ideal for extended periods of wear
- Soft, non-slip grip for optimum wearer comfort
- Contoured lens delivers ultimate cohesive fit
- Sun lens also available
- Unrivalled uvex permanent lens coating technology. High performance anti-fog on the inside, scratch resistant on the outside

**Art. no.** 9193.376

<b>Frame</b>	black-blue-black / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision extreme

**Art. no.** 9193.226

<b>Frame</b>	black-lime / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision extreme

**Art. no.** 9193.216

<b>Frame</b>	black-white-red / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision extreme

**Art. no.** 9193.277

<b>Frame</b>	black-blue-black / W 166 FT CE
<b>Lens</b>	PC grey 23% / sunglare filter UV 400 5-2.5 W 1 FTKN CE uvex supravision extreme

# uvex i-3 AR

Taking the wearer experience to a new level




#### Side arm inclination

The variable side arm inclination allows flexible adjustment to individual requirements and optimum coverage of the eyes. The Softflex ear pieces ensure a secure and pressure-free fit.

#### Nose loops

The extremely soft adjustable Softflex nose loops ensure the spectacles do not slip at any point and sit comfortably on the nose.

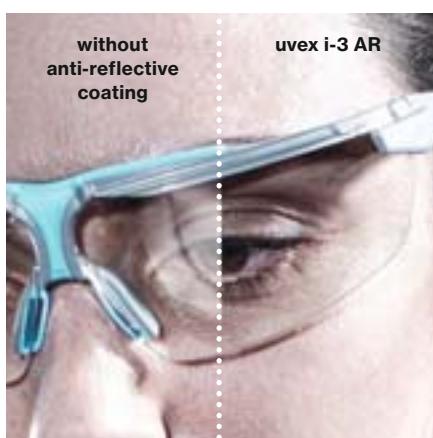


#### Coating

The anti-reflective coating on both sides provides 100% protection against UV 400 and a transmission factor of more than 96.5%, which means distracting reflections are effectively prevented.

Ensuring the eyes are also wide awake.

uvex i-3 AR are innovative safety spectacles with anti-reflective coating on both sides of the lenses. The high light conductivity ensures perfect vision at all times, for example when reading test parameters or working with highly reflective components. Strain on the eyes is reduced and the wearer will find it easier to focus.

These spectacles are particularly suitable for workplaces with a combination of artificial and natural light. In combination with exceptional wearer properties, this means the uvex i-3 AR has all the prerequisites of safety spectacles that people enjoy wearing. They always allow a clear view of what matters.

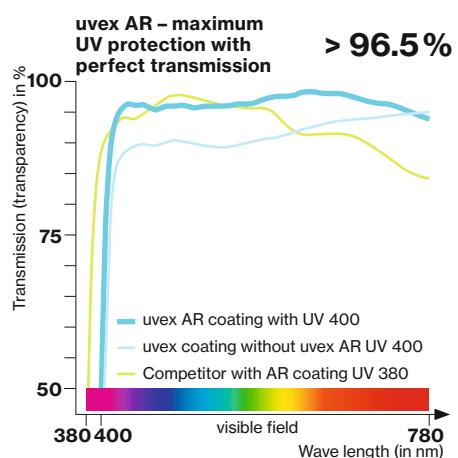

#### Transmission (transparency)

With the anti-reflective coating, the uvex i-3 AR reaches a higher transmission factor than safety spectacles with regular coating technology – ensuring perfect vision without reflections.

# Safety Spectacles

## uvex i-3



9190.275



9190.286



9190.880



9190.070



9190.315

9190.888  
9190.890

9190.220



9190.281



9190.885



9190.280 9190.175



### uvex i-3 · 9190

#### A new dimension in protective eyewear

- Wearer comfort for all head widths
- Adjusts for any face shape
- Flexible side arms with variable inclination
- Soft ear pieces
- Integrated Softflex zone for different head widths
- Softflex nose piece with flexible adjustment
- Pressure-free fit, even when worn for extended periods
- Secure fit
- 100% metal free

<b>Art. no.</b>	9190.275
<b>Frame</b>	anthracite-blue / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9190.070
<b>Frame</b>	graphite-olive / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision sapphire

<b>Art. no.</b>	9190.280
<b>Frame</b>	black-light grey / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9190.220
<b>Frame</b>	anthracite-yellow / W 166 FT CE
<b>Lens</b>	PC amber / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9190.286
<b>Frame</b>	anthracite-red / W 166 FT CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9190.315
<b>Frame</b>	white-lime / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9190.281
<b>Frame</b>	black-light grey / W 166 FT CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9190.880
<b>Frame</b>	black-anthracite / W 166 FT CE
<b>Lens</b>	PC light green / UV 400 5-1.1<2 W 1 FTKN CE uvex supravision variomatic

<b>Art. no.</b>	9190.888
<b>Frame</b>	grey-sky blue / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FT CE uvex supravision AR
<b>Features</b>	Retail-Packaging

<b>Art. no.</b>	9190.890
<b>Frame</b>	grey-sky blue / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FT CE uvex supravision AR

<b>Art. no.</b>	9190.885
<b>Frame</b>	black-light grey / W 166 FT CE
<b>Lens</b>	PC silver mirror / sunglare filter UV 400 5-3.1 W 1 FT CE AF on the inside

<b>Art. no.</b>	9190.175
<b>Frame</b>	black-grey / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision plus Eye protection areas involving oil and gas (see page 332/333)

<b>Replacement lens</b>	
<b>Art. no.</b>	9190.258
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence



# uvex astrospec 2.0

## For perfect all-round protection

The large panorama polycarbonate lens with integrated side protectors and brow guard ensures optimum eye coverage. Together with the uvex coating technology, the uvex astrospec 2.0 is a development of the world's most popular uvex safety spectacles offering exceptional protection and wearer comfort.

**Folds flat**

fits in any bag or pocket.

**Innovative product development**

based on the popular uvex astrospec design.

**Enhanced ventilation**

labyrinth seal improves climate around the eyes for increased comfort and visibility.



**Permanent anti-fog on the inside and scratch-resistant on the outside**  
thanks to uvex supravision excellence coated lenses.

**Fully adjustable to any facial shape**

flexible hard-soft side arms with variable inclination.



**reddot award 2014  
winner**

# Safety Spectacles

## uvex astrospec 2.0



9164.065



9164.185



9164.275



9164.285



9164.387



9164.220

reddot award 2014  
winner

9164.246



9164.187



### uvex astrospec 2.0 · 9164

#### A new style of guaranteed protection

- Innovative style and new technology ensure maximum wearer acceptance
- Maximum wearer comfort for all face shapes due to flexible 2K side arms and inclination
- Wraparound side arms ensure perfect fit
- Secure and pressure-free fit, even when worn for extended periods
- Ventilation with labyrinth seal helps improve climate around the eyes for increased
- Panoramic polycarbonate lens with integrated side protectors for optimum coverage of the eyes
- Folds flat

Art. no.	9164.065
Frame	blue-light blue / W 166 FT CE
Lens	PC clear / UV 400 2C-1.2 W 1 FTK CE uvex supravision sapphire

Art. no.	9164.275
Frame	anthracite-petrol / W 166 FT CE
Lens	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision extreme

Art. no.	9164.185
Frame	black-orange / W 166 FT CE
Lens	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision plus

Art. no.	9164.285
Frame	black-lime / W 166 FT CE
Lens	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

Art. no.	9164.220
Frame	black-yellow / W 166 FT CE
Lens	PC amber / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

Art. no.	9164.387
Frame	black-grey / W 166 FT CE
Lens	PC grey 14 % / sunglare filter UV 400 5-3.1 W 1 FTKN CE uvex supravision excellence

Art. no.	9164.246
Frame	neon orange-black / W 166 FT CE
Lens	PC grey 23 % / sunglare filter UV 400 5-2.5 W 1 FTKN CE uvex supravision excellence

Art. no.	9164.187
Frame	black-grey / W 166 FT CE
Lens	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision plus

Eye protection areas involving oil and gas (see page 332/333)

# Safety Spectacles

## uvex pheos · uvex pheos blue



9192.225



9192.215



9192.385



9192.245



9192.285



9192.280

9192.080



9192.881



9192.765

narrow version

### uvex pheos · 9192

- Modern, fashionable safety spectacle design
- Duo-spherical lens with uvex supravision lens coating technology
- Rimless spectacles with wide field of vision
- Permanent anti-fog on the inside
- Extremely scratch-resistant on the outside
- Completely metal-free

<b>Art. no.</b>	9192.225
<b>Frame</b>	black-green / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.215
<b>Frame</b>	light grey-grey / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.765
<b>Frame</b>	sand-blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.385
<b>Frame</b>	black-yellow / W 166 F CE
<b>Lens</b>	PC amber / UV 400 2C-1.2 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.245
<b>Frame</b>	black-orange / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.726
<b>Frame</b>	sand-blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.285
<b>Frame</b>	black-grey / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE uvex supravision extreme

<b>Art. no.</b>	9192.280
<b>Frame</b>	black-grey / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision extreme

<b>Art. no.</b>	9192.881
<b>Frame</b>	light grey-grey / W 166 F CE
<b>Lens</b>	PC silver mirror / sunglare filter UV 400 5-1.7 W 1 FCE anti-fog on the inside

<b>Art. no.</b>	9192.281
<b>Frame</b>	black-grey / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE uvex supravision plus

<b>Art. no.</b>	9192.080
<b>Frame</b>	black-grey / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision plus

Eye protection areas involving oil and gas (see page 332/333)



German  
Design Award

2012 ■ WINNER 2013

For further information, install the  
QR Code Reader and photograph  
the code using a smartphone.



# Safety Spectacles

## uvex pheos s · uvex pheos guard



### uvex pheos s · 9192

- Smaller version of uvex pheos for narrower heads
- Same properties as the standard models

<b>Art. no.</b>	9192.725
<b>Frame</b>	white-green / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.710
<b>Frame</b>	black-lime / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.785
<b>Frame</b>	anthracite-grey / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision excellence


<b>Art. no.</b>	9192.282
<b>Frame</b>	black-grey / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision extreme

<b>Art. no.</b>	9192.745
<b>Frame</b>	white-orange / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE uvex supravision excellence

<b>Art. no.</b>	9192.283
<b>Frame</b>	black-grey / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE uvex supravision extreme

<b>Art. no.</b>	9192.891
<b>Frame</b>	light grey-grey / W 166 F CE
<b>Lens</b>	PC silver mirror sunglare filter UV 400 5-1.7 W 1 FCE anti-fog on the inside

<b>Art. no.</b>	9192.180
<b>Frame</b>	black-grey / W166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision extreme

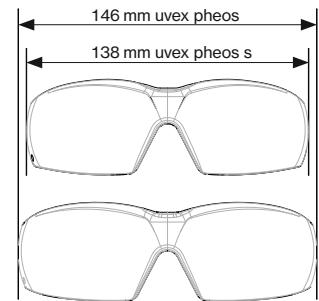

### uvex pheos guard · 9192

**uvex pheos guard is ready for use to offer protection at all times!**  
uvex pheos guard can be ordered as a complete set as separate components.

<b>Art. no.</b>	9192.180
<b>Frame</b>	black-grey / W166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision extreme

<b>Art. no.</b>	9192.680
<b>Frame</b>	black-grey / W166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE uvex supravision extreme

<b>Art. no.</b>	9192.181
<b>Frame</b>	black-grey / W166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE uvex supravision extreme

<b>Art. no.</b>	9192.681
<b>Frame</b>	black-grey / W166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE uvex supravision extreme

#### Extra frame

The clip in frames with soft padding can be ordered separately, with different frames available for the uvex pheos and uvex pheos s models respectively. Please ensure correct frame is selected when ordering (uvex pheos/uvex pheos s).

<b>Art. no.</b>	9192.001
<b>Colour</b>	black for uvex pheos

<b>Art. no.</b>	9192.002
<b>Colour</b>	black for uvex pheos s

#### Headband

The headband can be adapted for both uvex pheos and uvex pheos s models. The headband can be easily removed.

<b>Art. no.</b>	9958.020
<b>Colour</b>	grey-black

# Safety Spectacles

## uvex super g



9172.210  
9172.110



9172.185



9172.220



9172.881



9172.086



9172.281



9172.085



9172.265

### uvex super g · 9172

This exciting eyewear concept unites innovative technologies and high-tech materials.

- The world's lightest safety spectacles – only 18g – the same weight as a CD
- Wraparound style. Lenses have ideal aerodynamics and are angled forwards to provide excellent ventilation, enhancing comfort around the eye
- uvex x-stream technology – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Exceptional optical clarity due to extremely thin lenses
- 100% metal free

<b>Art. no.</b>	9172.210
<b>Frame</b>	crystal / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9172.086
<b>Frame</b>	titan / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FT DIN CE uvex supravision sapphire

<b>Art. no.</b>	9172.881
<b>Frame</b>	crystal / W 166 F CE

<b>Art. no.</b>	9172.265
<b>Frame</b>	navy blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9172.110
<b>Frame</b>	crystal / W 166 F CE

<b>Art. no.</b>	9172.220
<b>Frame</b>	titan / W 166 F CE
<b>Lens</b>	PC amber / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9172.085
<b>Frame</b>	titan / W 166 F CE

<b>Art. no.</b>	9172.281
<b>Frame</b>	anthracite-lime / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FTKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9172.185
<b>Frame</b>	black-grey / W 166 F CE

<b>Replacement lens</b>	
<b>Art. no.</b>	9172.255
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision excellence

# Safety Spectacles

## uvex super fit · uvex super fit ETC

9178.065  
9178.265

9178.385



9178.064



9178.286



9178.315



9178.415



9178.185



9178.500

### uvex super fit - 9178

- Sporty design ultra-light, safety spectacles with hinged side arms
- Extra slim wraparound lenses with exceptional optical clarity
- uvex x-stream-technology side arm concept – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Excellent non-slip fit

<b>Art. no.</b>	9178.065
<b>Frame</b>	navy blue-transparent / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FT DIN CE uvex supravision sapphire

<b>Art. no.</b>	9178.265
<b>Frame</b>	navy blue-transparent / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9178.286
<b>Frame</b>	black-transparent / W 166 FT CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FTKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9178.185
<b>Frame</b>	black-transparent / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision plus

<b>Art. no.</b>	9178.385
<b>Frame</b>	black-transparent / W 166 FT CE
<b>Lens</b>	PC amber / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9178.315
<b>Frame</b>	white-lime / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision clean

<b>Art. no.</b>	9178.500
<b>Frame</b>	white-light blue / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision clean Eyewear is autoclavable (cf. p. 31)

Suitable for use in changing light conditions (e.g. fork-lift and material-handling vehicles) and extremely well lit working environments.

<b>Art. no.</b>	9178.064
<b>Frame</b>	blue-transparent / W 166 FT CE
<b>Lens</b>	PC blue / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision excellence

### uvex super fit ETC - 9178

- uvex super fit hinged spectacles for severe working conditions
- Particularly suitable for very humid atmospheres and environments with extreme temperature variation
- Permanent anti-fog on both sides – risk of fogging eliminated
- Most suitable for tunnel construction, refrigerated warehouses, catering and food industry

<b>Art. no.</b>	9178.415
<b>Frame</b>	white/grey
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE ETC on both sides

uvex ETC coated lenses do not fog up.  
Instead of droplets, a film of water is formed.



Anti-Fog coating after 8 sec. | uvex ETC

# Safety Spectacles

## uvex i-vo



9160.064



9160.068  
9160.268



9160.120



9160.520



9160.076



9160.275



9160.065  
9160.265



9160.085  
9160.285

### uvex i-vo · 9160

- Comfort and design without compromise
- Spectacles provide maximum wearer comfort
- uvex duo component technology – combines hard and soft components for maximum wearer comfort
- Soft components around the sensitive parts of the face (ears, forehead, nose)
- Side arm length adjustment
- 5-stage inclination
- Available with fully adjustable side arms enables the wearer to achieve an individual fit
- Also available with head strap for working at heights or in confined spaces. Also aids compatibility with other items of PPE.

<b>Art. no.</b>	9160.064
<b>Frame</b>	blue-orange / W 166 FT CE
<b>Lens</b>	PC blue / UV 400 2C-1.2 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9160.085
<b>Frame</b>	blue-grey / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9160.268
<b>Frame</b>	blue-orange / W 166 FT CE
<b>Lens</b>	PC brown / sunglare filter UV 400 5-2.5 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9160.520
<b>Frame</b>	blue-orange / W 166 FT CE
<b>Lens</b>	PC amber / UV 400 2C-1.2 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9160.120
<b>Frame</b>	blue-grey / with headband
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FT CE uvex supravision excellence

<b>Art. no.</b>	9160.318
<b>Frame</b>	black-grey / W 166 FT CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9160.065
<b>Frame</b>	blue-orange / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9160.265
<b>Frame</b>	blue-orange / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9160.318
<b>Frame</b>	black-grey / W 166 FT CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9160.068
<b>Frame</b>	blue-orange / W 166 FT CE
<b>Lens</b>	PC brown / sunglare filter UV 400 5-2.5 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9160.275
<b>Frame</b>	black-grey / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9160.255
<b>Frame</b>	PC clear / UV 400 2C-1.2 W 1 FTKN CE uvex supravision excellence

<b>Art. no.</b>	9160.052
<b>Frame</b>	PC amber / UV 400 2C-1.2 W 1 FT CE uvex supravision sapphire

## uvex CR

Autoclave safety eyewear that goes further

Innovative coating technology – the first autoclavable safety eyewear with anti-fog performance

uvex has developed the first autoclavable safety goggles with anti-fog coating for specialist requirements in laboratories, clinics, cleanrooms and food manufacturing.

From ultra-light safety spectacles to goggles with a panorama lens, uvex CR is the ideal safety eyewear for all areas of application and specifically designed for repeated autoclave sterilisation.

**uvex CR – professional safety eyewear which complements hygiene standards.**



### uvex super fit CR · 9178

- Wide panoramic field of vision
- XST side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Increased compatibility with other items of PPE

Art. no.	9178.500
Frame	white-light blue / W 166 FT CE
Lens	PC clear / UV 400 2C-1.2 W 1 FTKN DIN CE uvex supravision clean

### uvex super f OTG CR · 9169

- Wide panoramic field of vision
- XST side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Increased compatibility with other items of PPE
- Can be worn over most prescription spectacles

Art. no.	9178.500
Frame	white-light blue / W 166 FT CE
Lens	PC clear / UV 400 2C-1.2 W 1 FKN uvex supravision clean

### uvex ultrasonic CR · 9302

- Indirect ventilation ensures pleasant interior environment
- Can be worn over most prescription spectacles
- Wide panoramic field of vision
- Silicone headband can be easily and quickly adjusted
- Increased compatibility with other items of PPE
- Easy lens replacement

Art. no.	9302.500
Frame	transparent-white / W 166 349 B CE
Lens	PC clear / UV 400 2-1.2 W 1 B9 KN DIN CE uvex supravision clean

# Safety Spectacles

## uvex skyper · uvex skyper s



9195.265



9195.075



9195.020



9195.078  
9195.278

### uvex skyper · 9195

- Fully adjustable safety spectacles
- 5 different side arm positions and precise lens inclination
- Lens and frame made from high impact-resistant plastic
- Excellent field of vision
- Frosted sidesprotect against glare
- Individually adjustable
- Lens replacement possible

<b>Art. no.</b>	9195.265
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9195.078
<b>Frame</b>	black / W 166 F CE
<b>Lens</b>	PC brown / sunglare filter UV 400 5-2.5 W 1 F DIN CE uvex supravision sapphire

<b>Replacement lenses</b>	
<b>Art. no.</b>	9195.055
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9195.075
<b>Frame</b>	black / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9195.278
<b>Frame</b>	black / W 166 F CE
<b>Lens</b>	PC brown / sunglare filter UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9195.255
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9195.020
<b>Frame</b>	black / W 166 F CE
<b>Lens</b>	PC amber / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9195.118
<b>Lens</b>	PC brown / sunglare filter UV 400 5-2.5 W 1 F DIN CE uvex supravision sapphire



9196.065  
9196.265

### uvex skyper s · 9196

- Smaller version of uvex skyper for narrower heads
- Same properties as the standard model uvex skyper 9195
- Individually adjustable side arms – 5 different side arm positions and precise lens inclination

<b>Art. no.</b>	9196.065
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9196.265
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

# Safety Spectacles

uvex skyper sx2 · uvex skybrite sx2



9197.020

9197.265  
9197.065

9197.266

## uvex skyper sx2 · 9197

- Safety spectacles with maximum functionality
- Sporty design with contoured lens. Fits all facial shapes including those with narrower faces
- Optimum protection
- Individually adjustable side arms – 5 different side arm positions and precise lens inclination
- Contoured lens shape for higher cheekbones and narrower faces

<b>Art. no.</b>	9197.020
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC amber / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9197.266
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9197.065
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Replacement lens</b>	
<b>Art. no.</b>	9197.055
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9197.265
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence



9197.260



9197.880

## uvex skybrite sx2 · 9197

The uvex skyper sx2 is also available in stylishly transparent colours – uvex skybrite sx2.

<b>Art. no.</b>	9197.260
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9197.880
<b>Frame</b>	silver / W 166 F CE
<b>Lens</b>	PC silver mirror / sunglare filter UV 400 5-1.7 W 1 F DIN CE

# Safety Spectacles

uvex astrospec · uvex astroflex



9168.035



9168.017



9168.065  
9168.265



9163.265

## uvex astrospec - 9168

- High impact-resistant polycarbonate lens with integrated side protectors
- uvex duo-flex side arms with 4-stage side arm length adjustment and lens inclination allows wearers to achieve individual pressure free fit
- One of the best-selling safety spectacles models in the world
- Lens replacement possible

<b>Art. no.</b>	9168.035
<b>Frame</b>	yellow-black / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Replacement lenses</b>	
<b>Art. no.</b>	9168.055
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9168.017
<b>Frame</b>	yellow-black / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9168.255
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9168.065
<b>Frame</b>	blue / W 166 F CE / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9168.517
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9168.265
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

## uvex astroflex - 9163

- High impact-resistant polycarbonate lens for excellent peripheral vision
- Flexible brow guard for protection against reflected light, dust and spray
- Additional shock absorption for mechanical impact
- uvex duo-flex side arms with variable side arm inclination
- 4-stage side arm length adjustment with integrated microratchet mechanism allows wearers to achieve an individual fit

<b>Art. no.</b>	9163.265
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN 166 F DIN CE uvex supravision excellence

# Safety Spectacles

uvex skyguard NT · uvex skylite · uvex x-trend



9175.260  
9175.160



9174.095



9175.261



9174.096



9175.275



9174.065



9177.286



9177.285



## uvex skyguard NT · 9175

- Spectacles with all-round protection
- Frame with injection moulded soft TPU
- Protects against liquid droplets and splashes; large dust particles
- Flexible, closed-pore soft components of frame adapt to individual face contours
- Easy, hygienic cleaning due to separate frame and lens concept
- Side arm length adjustment ensures optimum fit
- Article No. 9175.275 aids compatibility with safety helmets

<b>Art. no.</b>	9175.260
<b>Frame</b>	blue-grey / adjustable length side arms / W 166 34 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9175.261
<b>Frame</b>	blue-grey / adjustable length side arms / W 166 34 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN DIN CE uvex supravision excellence

<b>Art. no.</b>	9175.160
<b>Frame</b>	blue-grey / adjustable length side arms / W 166 34 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision extreme

<b>Art. no.</b>	9175.275
<b>Frame</b>	grey-orange / W 166 34 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision excellence

## uvex skylite · 9174

- Sporty design
- Integrated frosted side protector aids glare protection
- Lens inclination adjustment

<b>Art. no.</b>	9174.095
<b>Frame</b>	metallic red / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9174.096
<b>Frame</b>	metallic red / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9174.065
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE uvex supravision sapphire

<b>Art. no.</b>	9174.066
<b>Frame</b>	blue / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 F DIN CE uvex supravision sapphire

## uvex x-trend · 9177

- Fashionable, anatomically-shaped wraparound lens offers clear vision
- Large lenses offers excellent peripheral vision for increased safety

<b>Art. no.</b>	9177.285
<b>Frame</b>	black / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F CE uvex supravision excellence

<b>Art. no.</b>	9177.286
<b>Frame</b>	black / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 F CE uvex supravision excellence

# uvex academy

## Industrial protective eyewear



---

### A practical introductory seminar on the use of PPE products for eye protection.

- The basic applications of PPE eyewear, including products that protect against mechanical dangers, chemicals and radiation (e.g. welding protection), and products designed for specialised applications
- Demonstration and assessment of the dangers posed by mechanical finishing, infrared and ultraviolet radiation (e.g. encountered during welding or in chemicals), illustrated by case studies
- Assessment of the risk of eye injury in the workplace
- Explanation of how these risks can be dealt with efficiently in each workplace
- Comprehensive overview of the requirements of industrial protective eyewear, standards, applications, risk assessment and how to care for protective eyewear
- Information on the classification of protection products based on their labelling and the areas of application of the various types of equipment

#### Target group

Those responsible for the work-related health and safety of employees within a company, e.g. health and safety officers and specialist purchasers.



For more information or to book a place, please visit [uvex-academy.de](http://uvex-academy.de),  
call +49 (0)911 9736 1710 or email [academy@uvex.de](mailto:academy@uvex.de)

# uvex academy

 VDSI-PUNKT  
Arbeitsschutz 

# Safety Spectacles

uvex futura · uvex cosmoflex · uvex meteor



9180.015  
9182.005  
narrow version

## uvex futura · 9180 · 9182

- Classic safety spectacles with extremely wide field of vision
- Outstanding close fit
- uvex duo-flex side arms with 4-stage side arm length adjustment and adjustable side arm inclination
- Replaceable polycarbonate lenses
- Available with a welding lens
- 9182 model for narrower heads

<b>Art. no.</b>	9180.015
<b>Frame</b>	brown / W166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FK DIN CE uvex supravision sapphire

<b>Art. no.</b>	9180.125
<b>Frame</b>	brown / W166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision plus

<b>Art. no.</b>	9182.005
<b>Frame</b>	brown / W166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FK uvex supravision sapphire

Replacement lenses	
<b>Art. no.</b>	9180.055
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FK DIN CE uvex supravision sapphire

<b>Art. no.</b>	9180.155
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision plus

<b>Art. no.</b>	9182.055
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FK uvex supravision sapphire



9130.305  
9130.302

## uvex cosmoflex · 9130

- Twin-lens spectacles with excellent fit
- Integrated brow guard provides protection against overhead particles from
- uvex duo-flex side arms with 4-stage side arm length adjustment and integrated side protectors
- Spectacles fit well in breast pocket due to flat design
- Exceptional wearer comfort

<b>Art. no.</b>	9130.305
<b>Frame</b>	transparent grey / W166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FK uvex supravision sapphire

<b>Art. no.</b>	9130.302
<b>Frame</b>	transparent grey / W166 CE
<b>Lens</b>	HG clear W 1 S DIN CE



9134.005

## uvex meteor · 9134

- Compact twin-lens spectacle
- Optimum protection of the eye area
- Side arm length adjustment and softform ear pieces allows wearers to achieve a comfortable fit in cold condition
- Adapts to the wearer's head shape
- Secure and comfortable fit, even when worn for extended periods
- Spectacles fit well in breast pocket due to flat design
- Available as standard or prescription safety spectacles

<b>Art. no.</b>	9134.005
<b>Frame</b>	transparent grey / W166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FK DIN CE uvex supravision sapphire

# Safety Spectacles

## uvex racer MT · uvex winner



9153.105



9153.106



9153.881



9159.005



9159.016



9159.118

### uvex racer MT · 9153

- Sporty, dynamic single-lens spectacles
- Lens connected to frame at three points without screws
- High level of protection when subjected to mechanical stress
- Very low profile metal frame
- High flexibility and extremely low weight
- Individually adjustable nose piece

<b>Art. no.</b>	9153.105
<b>Frame</b>	gun / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN CE scratch-resistant, non-fogging

<b>Art. no.</b>	9153.106
<b>Frame</b>	gun / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE scratch-resistant, non-fogging

<b>Art. no.</b>	9153.881
<b>Frame</b>	gun / W 166 F CE
<b>Lens</b>	PC silver mirror / sunglare filter UV 400 5-1.7 W 1 F CE

### uvex winner · 9159

- The must have metal framed spec
- Close fitting offers high levels of protection and a wide field of visibility
- Sprung side arms provide secure fit
- Hinged nose pads adapt to the wearer
- Comfortable fit, even when worn for extended periods

<b>Art. no.</b>	9159.005
<b>Frame</b>	gun / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F CE scratch-resistant on both sides

<b>Art. no.</b>	9159.016
<b>Frame</b>	gun / W 166 F CE
<b>Lens</b>	PC green / UV 400 2-1.7 W 1 F CE scratch-resistant on both sides

<b>Art. no.</b>	9159.105
<b>Frame</b>	gun / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 FKN CE scratch-resistant, non-fogging

<b>Art. no.</b>	9159.116
<b>Frame</b>	gun / W 166 F CE
<b>Lens</b>	PC green / UV 400 2-1.7 W 1 FKN CE scratch-resistant, non-fogging

<b>Art. no.</b>	9159.118
<b>Frame</b>	gun / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 FKN CE scratch-resistant, non-fogging

# Safety Spectacles

uvex mercury · uvex 9148 · uvex 9149



## uvex mercury · 9155

- Slim, steel blue men's spectacles
- Spectacles fit well in breast pocket due to flat design
- Transparent side shields for increased protection
- Excellent peripheral vision
- Maximum wearer comfort

<b>Art. no.</b>	9155.005
<b>Frame</b>	steel blue / W 166 F CE
<b>Size</b>	54/19
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FK DIN CE uvex supravision sapphire



## uvex · 9148

- Fashionable aviator-style metal frame
- Anatomically shaped, adjustable nose pads
- Transparent side shields for increased protection
- Easily adjustable TPE ear pieces

<b>Art. no.</b>	9148.005
<b>Frame</b>	gun / W 166 F CE
<b>Size</b>	51/20
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FK CE uvex supravision sapphire



## uvex · 9149

- Classic metal frame with double nose piece
- Anatomically shaped, adjustable nose pads
- Transparent side shields for increased protection
- Easily adjustable TPE ear pieces

<b>Art. no.</b>	9149.005
<b>Frame</b>	gun / W 166 F CE
<b>Size</b>	55/17
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FK CE uvex supravision sapphire

# Safety Spectacles

uvex polavision · uvex cybric · uvex cyberguard



9231.960

## uvex polavision · 9231

### Improving recognition

- Comfortable twin-lens spectacle
- Polarisation filter reliably protects against eye strain
- Particularly suitable for reflective surfaces (offshore, maritime conditions)
- Protects against reflections and optical irritations outdoors (e.g. water surfaces) for greater visual comfort

<b>Art. no.</b>	9231.960
<b>Frame</b>	black-white / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-3.1 W 1 F CE
	scratch-resistant



9188.020

## uvex cybric · uvex cyberguard · 9188

- Robust, sporty twin-lens safety spectacle design
- Wraparound lens offers excellent field of vision for improved safety
- Four pads of the uvex quattroflex temple in the sensitive ear region ensure a comfortable, pressure-free fit
- Fully adjustable side arms enable the wear to achieve an individual fit
- Straight side arms grip the side of the head not behind the ears for a secure, comfortable, none slip fit

<b>Art. no.</b>	9188.020
<b>Frame</b>	black-orange / W 166 F CE
<b>Lens</b>	PC amber / UV 400 2-1.2 W 1 F DIN CE
	uvex supravision sapphire

<b>Art. no.</b>	9188.075
<b>Frame</b>	black-orange / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE
	uvex supravision sapphire

<b>Art. no.</b>	9188.076
<b>Frame</b>	black-orange / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 F DIN CE
	uvex supravision sapphire

<b>Art. no.</b>	9188.078
<b>Frame</b>	black-orange / W 166 F CE
<b>Lens</b>	PC brown / sunglare filter UV 400 5-2.5 W 1 F DIN CE
	uvex supravision sapphire

<b>Art. no.</b>	9188.175
<b>Frame</b>	black-orange / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE
	uvex supravision plus

<b>Art. no.</b>	9188.881
<b>Frame</b>	black-orange / W 166 F CE
<b>Lens</b>	PC blue mirror / sunglare filter UV 400 5-2.5 W 1 F DIN CE

<b>uvex cyberguard</b>	
<b>Art. no.</b>	9188.121
<b>Frame</b>	black / W 166 F 34 CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 F DIN CE
	uvex supravision plus

<b>Extra frame</b>	
<b>Art. no.</b>	9188.001
<b>Frame</b>	black

The frames can be bought individually and are suitable for all uvex cybric models.



9188.078



9188.881



9188.121



9188.001

# Overspecs

uvex 9161 · uvex super OTG · uvex super f OTG



9161.005  
9161.305



9161.014



9169.065  
9169.260



9169.080



9169.081



9169.580



9169.585



9169.615



9169.586



9169.850



9169.500

## uvex · 9161

- Overspecs for use over prescription spectacles
- Unrestricted peripheral vision
- Pressure-free fit through uvex duo-flex side arms
- Side arm length adjustment
- Suitable for use over most prescription spectacles
- Model 9161.014 available without coating and with polycarbonate side arms

<b>Art. no.</b>	9161.005
<b>Frame</b>	blue-black / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 F CE uvex supravision sapphire

<b>Art. no.</b>	9161.014
<b>Frame</b>	clear / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 F CE uncoated

<b>Art. no.</b>	9161.305
<b>Frame</b>	blue-black / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 F CE uvex supravision plus

## uvex super OTG · 9169

- Hingeless side arms with extremely flexible soft ear pieces
- Suitable for use over most prescription spectacles
- Unrestricted peripheral vision
- uvex x-stream technology – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Maximum wearer comfort
- 100% metal free

<b>Art. no.</b>	9169.065
<b>Frame</b>	navy blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 F uvex supravision sapphire

<b>Art. no.</b>	9169.081
<b>Frame</b>	black / W 166 F CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 F uvex supravision sapphire

<b>Art. no.</b>	9169.080
<b>Frame</b>	black / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 F uvex supravision sapphire

<b>Art. no.</b>	9169.260
<b>Frame</b>	navy blue / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN uvex supravision excellence

## uvex super f OTG · 9169

- New side arm hinge concept with extremely soft ear pieces
- Side arms with extremely flexible soft ear pieces
- Suitable for use over most prescription spectacles
- Unrestricted peripheral vision
- uvex x-stream technology – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Maximum wearer comfort

<b>Art. no.</b>	9169.585
<b>Frame</b>	black transparent / W 166 F CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 F uvex supravision sapphire

<b>Art. no.</b>	9169.580
<b>Frame</b>	black transparent / W 166 FT CE
<b>Lens</b>	PC amber / UV 400 2C-1.2 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9169.615
<b>Frame</b>	black transparent / W 166 FT CE
<b>Lens</b>	PC orange / UV 525 2-1.4 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9169.615
<b>Frame</b>	black transparent / W 166 FT CE
<b>Lens</b>	PC orange / UV 525 2-1.4 W 1 FT CE uvex supravision sapphire

<b>Art. no.</b>	9169.500
<b>Frame</b>	white-light blue / W 166 FT CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 FKN uvex supravision clean Eyewear is autoclavable (cf. p. 31)

<b>Art. no.</b>	9169.850
<b>Frame</b>	black transparent / W 166 F CE
<b>Lens</b>	PC light green / sunglare filter UV 400 5-1.1<2 W 1 FKN uvex supravision variomatic

### Available with uvex variomatic lens

## uvex u-sonic

Perfect fit, light weight, optimal temperature

As a result of its ergonomic design with flexible soft components, uvex u-sonic adapts perfectly to any face shape – its light weight and the lack of pressure make it especially pleasant to wear. The wide panoramic lens can be replaced: the integrated magnet technology facilitates rapid lens exchange.



**A viewing pane**  
can be rapidly attached  
using integrated magnet technology  
(grey glare protection 16 %).

**Optimum wearer comfort**  
through even pressure distribution.

**Anti-fog**  
Via the uvex supravision  
coating.



**Scratch-resistant**  
thanks to uvex supravision.

**Eye area is very  
comfortable**  
thanks to innovative  
ventilation system.

**Ideally suited for combina-  
tion with safety helmet**  
on account of its compact design.



MADE IN GERMANY ■■■

# Safety Goggles

## uvex u-sonic



9308.245



9308.247



9308.240



9308.248



9308.246



9308.048 Add-on lens

### uvex u-sonic · 9308

Low weight, high comfort

- Compact, lightweight full-vision goggle
- Compact design makes it fully compatible with other PPE, such as helmets
- Innovative ventilation system ensures comfortable internal goggle environment lens replacement possible
- 9308.248: quickly attach additional lens (glare protection, grey: 16%) thanks to integrated magnet technology
- Compact design – just 69g (without additional lens)
- Low profile, wraparound design fits a wide range of facial shapes
- Soft seal frame technology adapts to your face for a customised fit – protects against liquid droplets/splash large dust particles
- Permanent anti-fog on the inside of the lens, scratch resistant on the outside
- Wide fully adjustable head strap-secure, pressure free fit
- 9308.246 and 9308.247 – reduced ventilation

<b>Art. no.</b>	9308.245
<b>Frame</b>	grey-lime / W 166 34 B DIN 0196 CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 BKN CE uvex supravision excellence

<b>Art. no.</b>	9308.240
<b>Frame</b>	grey-lime / W 166 34 B DIN 0196 CE
<b>Lens</b>	PC grey 23% / sunglare filter UV 400 5-2.5 W 1 BKN CE uvex supravision excellence

<b>Art. no.</b>	9308.246
<b>Frame</b>	grey-yellow / W 166 34 B DIN 0196 CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 BKN CE uvex supravision extreme with reduced ventilation

<b>Art. no.</b>	9308.247
<b>Frame</b>	black-red / W 166 34 B DIN 0196 CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 BKN CE uvex supravision excellence with reduced ventilation

<b>Art. no.</b>	9308.248
<b>Frame</b>	grey-orange / W 166 34 B DIN 0196 CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 BKN CE uvex supravision excellence
<b>Additional lens</b>	PC grey 16% / sunglare filter UV 400 5-3.1 W 1 CE uvex supravision sapphire
<b>Features</b>	Available with magnetic grey sunglare lens and magnetic headband

<b>Additional lens</b>	
<b>Art. no.</b>	9308.048
<b>Lens</b>	PC grey 16% / sunglare filter UV 400 5-3.1 W 1 CE uvex supravision sapphire

<b>Replacement lenses</b>	
<b>Art. no.</b>	9308.242
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 BKN CE uvex supravision excellence

<b>Art. no.</b>	9308.241
<b>Lens</b>	PC grey 23% / sunglare filter UV 400 5-2.5 W 1 BKN CE uvex supravision excellence



# Safety Goggles

uvex carbonvision



9307.375



9307.276



9307.365

## uvex carbonvision - 9307

- Low profile, wraparound design with innovative frame, strap and material development for a significantly lighter weight goggle
- High tech materials combine hard and soft components which adapt to wearer's face creating soft, effective seal around the eyes
- Soft seal protects against dust, splashes and mechanical hazards
- Easy and hygienic cleaning due to detachable frame and lens concept
- Adjustable high quality strap for individual and pressure-free fit
- uvex permanent supravision extreme lens coating offers excellent anti-fog performance preventing goggles from steaming up
- Compatible with other items of PEE such as masks, hearing protection or helmets
- Also available with neoprene headband and detectable

<b>Art. no.</b>	9307.375
<b>Frame</b>	black-grey / W 166 34 B CE
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 B KN DIN CE uvex supravision extreme

<b>Art. no.</b>	9307.276
<b>Frame</b>	black-grey / W 166 34 B CE
<b>Lens</b>	PC grey / sunglare filter UV 400 5-2.5 W 1 B KN DIN CE uvex supravision extreme

<b>Art. no.</b>	9307.365
<b>Frame</b>	black-grey / W 166 34 B CE
<b>Model</b>	with neoprene headband
<b>Lens</b>	PC clear / UV 400 2-1.2 W 1 B KN DIN CE uvex supravision extreme



Convenient clip to remove headband before cleaning.



Flexible soft components adapt perfectly to your face shape and ensure a perfect fit.



High-quality, long-lasting headband

Robust frame with flexible soft components

Outstanding seal and splashproof protection

# Safety Goggles

## uvex ultrasonic



### uvex ultrasonic · 9302

- Wide-vision goggles with exceptional wearer comfort
- Combines hard and soft components which adapt to the wearer's face creating soft, effective seal around the eyes
- uvex supravision lens coating technology – anti-fog on the inside of the lens, scratch resistant on the outside, permanent – won't wash off
- Wide fully adjustable, high quality head strap offers pressure-free fit, even when worn for extended periods
- Comprehensive side protection around the eye area, even when worn over prescription spectacles
- Indirect ventilation ensures pleasant comfortable interior environment
- Sporty ski goggle design with wide panoramic field of vision
- Lens replacement possible
- Soft materials aid compatibility with respirators and other items of PPE
- Can be worn over most prescription spectacles
- Mechanical strength: B – Medium energy impact protection (120 m/s)

<b>Art. no.</b>	9302.245	<b>Art. no.</b>	9302.601	<b>Art. no.</b>	9302.510
<b>Frame</b>	grey-orange / W 166 349 B CE	<b>Model</b>	with reduced ventilation	<b>Model</b>	with reduced ventilation for
<b>Lens</b>	PC clear / UV 400	<b>Frame</b>	black-red / W 166 349 B CE	<b>Frame</b>	combining with a helmet and ear
	2-1.2 W 1 B9 KN DIN CE	<b>Lens</b>	PC clear / UV 400	<b>Lens</b>	defenders uvex 2H, uvex 3H and
	uvex supravision excellence		2-1.2 W 1 B9 KN DIN CE		uvex 3200H
<b>Art. no.</b>	9302.285	<b>Art. no.</b>	9302.281	<b>Art. no.</b>	blue-grey / W 166 349 B CE
<b>Frame</b>	black-grey / W 166 349 B CE	<b>Model</b>	with rubber headband	<b>Model</b>	PC clear / UV 400
<b>Lens</b>	PC clear / UV 400	<b>Frame</b>	black-grey / W 166 349 B CE	<b>Frame</b>	2-1.2 W 1 B9 KN DIN CE
	2-1.2 W 1 B9 KN DIN CE	<b>Lens</b>	PC clear / UV 400	<b>Lens</b>	uvex supravision extreme
	uvex supravision excellence		2-1.2 W 1 B9 KN DIN CE		
<b>Art. no.</b>	9302.247	<b>Art. no.</b>	9302.500		
<b>Frame</b>	grey-orange / W 166 349 B CE	<b>Model</b>	uvex CR		
<b>Lens</b>	PC brown / sunglare filter UV 400	<b>Frame</b>	transp.-white / W 166 349 B CE		
	5-2.5 W 1 B9 KN DIN CE	<b>Lens</b>	PC clear / UV 400		
	uvex supravision excellence		2-1.2 W 1 B9 KN DIN CE		
<b>Art. no.</b>	9302.286	<b>Art. no.</b>	9302.255		
<b>Frame</b>	black-grey / W 166 349 B CE	<b>Model</b>	uvex supravision		
<b>Lens</b>	PC grey / sunglare filter UV 400	<b>Frame</b>	clean		
	5-2.5 W 1 B9 KN DIN CE	<b>Lens</b>	Eyewear is autoclavable (cf. p. 31)		
	uvex supravision excellence				
<b>Art. no.</b>	9302.275		<b>Replacement lenses</b>		
<b>Frame</b>	anthracite-lime / W 166 349 B CE	<b>Art. no.</b>	9302.255		
<b>Lens</b>	PC clear / UV 400	<b>Lens</b>	PC clear / UV 400		
	2-1.2 W 1 B9 KN DIN CE		2-1.2 W 1 B9 KN DIN CE		
	uvex supravision extreme		uvex supravision excellence		
<b>Art. no.</b>	9302.600	<b>Art. no.</b>	9302.257		
<b>Model</b>	with reduced ventilation	<b>Lens</b>	PC brown / sunglare filter UV 400		
<b>Frame</b>	blue-grey / W 166 349 B CE		5-2.5 W 1 B9 KN DIN CE		
<b>Lens</b>	PC clear / UV 400		uvex supravision excellence		
	2-1.2 W 1 B9 KN DIN CE				
	uvex supravision extreme				
<b>Art. no.</b>	9302.256	<b>Art. no.</b>	9302.256		
<b>Lens</b>	PC grey / sunglare filter UV 400	<b>Model</b>	PC clear / UV 400		
	5-2.5 W 1 B9 KN DIN CE		2-1.2 W 1 B9 KN DIN CE		
	uvex supravision excellence		uvex supravision excellence		

Helmet and hearing protection not included!  
Additional adaptors are needed in order to fit the uvex ultrasonic without ear defenders:

**Art. no.** 9924.010

# Safety Goggles

## uvex ultravision

9301.714  
9301.105  
9301.815

9301.716



9301.906

9301.116  


9301.613



9301.813



9301.544

### uvex ultravision · 9301

- Ergonomic wide-vision goggles with unrestricted peripheral vision
- Sophisticated ventilation system ensures exceptional wearer comfort
- Optional anti-fog lenses
- Lens replacement possible
- Outstanding close and pressure-free fit
- Special models available:
  - with tear-off lenses 9301.813
  - with additional comfort cushioning 9301.716
  - yellow gas-tight version 9301.613
  - with wide nose piece for combination with dust masks 9301.906
- Mechanical strength:  
PC lenses: B – Medium energy impact protection (120 m/s)  
CA lenses: F – Low energy impact protection (45 m/s)

#### 9301.544

With helmet adaptor to combine with uvex airwing safety helmet and ear defenders uvex 2H, uvex 3H and uvex 3200H. Helmet and hearing protection not included!

<b>Art. no.</b>	9301.714
<b>Frame</b>	transparent grey / W 16634 F CE
<b>Lens</b>	CA clear / UV 380, non-fogging 2-1.2 W 1 FN DIN CE

<b>Art. no.</b>	9301.716
<b>Frame</b>	transparent grey / W 166 34 F CE
<b>Lens</b>	CA clear / UV 380, non-fogging 2-1.2 W 1 FN DIN CE

<b>Art. no.</b>	9301.906
<b>Frame</b>	transparent grey / W 166 3 F CE
<b>Lens</b>	CA clear / UV 380, non-fogging 2-1.2 W 1 FN DIN CE

<b>Art. no.</b>	9301.105
<b>Frame</b>	transparent grey / W 166 349 B CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 B 9 KN CE uvex supravision excellence

<b>Art. no.</b>	9301.116
<b>Frame</b>	transparent grey / W 166 34 B CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 B 9 KN CE uvex supravision plus

<b>Art. no.</b>	9301.815
<b>Frame</b>	transparent grey / W 166 349 B CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 B 9 KN CE uvex supravision excellence

<b>Art. no.</b>	9301.613
<b>Frame</b>	yellow, gastight / W 166 3459 B CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 B 9 KN DIN CE uvex supravision excellence

<b>Art. no.</b>	9301.813
<b>Frame</b>	transparent grey / W 166 349 B CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 B 9 KN CE uvex supravision excellence

Additional adaptors are needed in order to fit the uvex ultravision without ear defenders:  
**Art. no.** 9924.010

<b>Replacement lenses</b>	
<b>Art. no.</b>	9300.517
<b>Lens</b>	CA clear / UV 380,non-fogging 2-1.2 W 1 FN DIN CE

<b>Art. no.</b>	9300.956
<b>Lens</b>	CA clear / UV 380,non-fogging for wide nose section 2-1.2 W 1 FN DIN CE

<b>Art. no.</b>	9301.255
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 B 9 KN CE uvex supravision excellence

<b>Art. no.</b>	9300.316
<b>Lens</b>	tear-off films for 9301.813 clear Minimum purchasing quantity: 10

#### N. B.:

CA lenses do not fit in PC models and vice versa.

# Safety Goggles

uvex ultravision 9301 · uvex 9405 · uvex 9305



9301.555



9301.318



9301.317

## uvex ultravision · 9301

### 9301.555

- Attaches to the uvex ultravision goggle for optimum protection. Unlike conventional face shields, the goggle completely seals and protects the eyes
- Offers additional facial protection against liquid splash and flying particles
- Can be worn over respirators
- Lifts via hinge mechanism
- Order includes wide-vision ultravision goggle and faceguard (mounted)

<b>Art. no.</b>	9301.555
<b>Model</b>	faceguard model
<b>Frame</b>	transparent grey / W 166 349 B CE
<b>Lens</b>	PC clear / UV 400 2C-1.2 W 1 B 9 KN CE uvex supravision excellence

<b>Art. no.</b>	9301.318
<b>Mouth shield</b>	PC clear for all models 9301 with PC lenses not mounted, without goggle

<b>Art. no.</b>	9301.317
<b>Mouth shield</b>	PC clear, for all models 9301 not mounted, without goggle



9405.714

## uvex · 9405

- Wide-vision goggles with all-round ventilation system
- Can be worn over most prescription spectacles
- Upper part of body frosted to protect against glare
- Headband can be easily and quickly adjusted
- Compatible with half masks and filtering half masks
- Mechanical strength: F –  
Low energy impact protection (45 m/s)

<b>Art. no.</b>	9405.714
<b>Frame</b>	transparent grey / W 166 34 F CE

<b>Replacement lens</b>	
<b>Art. no.</b>	9400.517

<b>Lens</b>	CA clear / UV 380,non-fogging W 1 FN DIN CE
-------------	--



9305.514

## uvex · 9305

- Classic wide-vision goggles with sophisticated ventilation system
- Available with elasticated fabric or rubber headband
- Washable, fluff-free rubber headband
- Mechanical strength: F –  
Low energy impact protection (45 m/s)

<b>Art. no.</b>	9305.514
<b>Frame</b>	transparent grey / W 166 34 F CE

<b>Art. no.</b>	9305.714
<b>Frame</b>	transparent grey / W 166 34 F CE



9305.714

# laservision

Innovative laser protection solutions

Rapid developments in laser technology mean that laser protection is becoming ever more important in terms of personal safety. New laser applications in all areas of industry, research and medicine demand new and unique safety and protection solutions. laservision, a member of the uvex group is one of the leading global producers of laser protection products. It develops, manufactures and distributes laser protection glasses, large-scale laser protection (mobile screens and safety curtains), small filters and cabin windows for all laser types and applications.



## Laser protective spectacles and cabin windows

Based on physical properties, such as radiation intensity and focusing capability (spatial coherence), laser light is potentially very hazardous, particularly for the eyes. The valid laser protective norms (EN 207 and EN 208) and safety regulations (BGV B2) stipulating the wearing of laser safety eyewear are the response to these hazards.

This laser safety eyewear with coated or absorbent special lenses and plastics is a core focus of the laservision product portfolio. We have more than 30 years of experience in this technology. At the same time, laservision offers an extensive range of glass and plastic filter materials as windows for installation in machine housings, partitions and curtains.

## Active protection systems

For automated laser processing operations, i.e. operations which are not under constant surveillance, to be classified as test class T1, European standard EN 60825-4 housing must maintain a survival rate of 30,000 seconds. However, where laser output and radiation intensity are constantly on the increase, rates of this order are no longer achievable with passive protection systems, particularly in the case of window materials.

The newly patented active cabin window system from laservision provides the ideal and simplest solution to this problem in the form of integrated electronics installed within the safety circuitry of the laser system.

When laser beams hit the plastic pane with enough output to activate the sensor integrated in the frame, the laser is immediately switched off before hazardous radiation can be transmitted through the pane. The system gives users a complete CE-certified class T1 system in line with the applicable machine construction directive. In combination with an active cabin wall system, this makes a complete and certifiable solution available for industrial high-performance laser units operating in the 820 to 1100 nm wavelength spectrum.

## Screens

Alternatively, it is possible to screen out laser radiation by mechanical means and to protect potentially endangered personnel during laser operation in this way. Screening against laser radiation may take the form of curtains, partitions or even fixed insulating walls. These can be installed in the workplace, or they may be integrated in machinery housing. laservision offers standard and customer-specific solutions for screening which comply with the applicable standards. On account of the wide range of possible materials and solutions, we advise our customers on their protection issues *in situ* at their own premises in order to find the best possible solution.

## Training

laservision, in cooperation with the uvex academy offers a programme of modular courses on laser safety. These feature compulsory annual laser safety training together with special courses for those responsible for laser safety, advanced customised seminars, an internship in laser safety and measuring techniques.

laservision is an active and knowledgeable partner for various National and International standards committees and takes part in domestic and International research projects in the field of laser safety in conjunction with research institutions.

# laservision

LASERVISION GmbH & Co. KG  
Telefon: +49 911 973681-00 · E-Mail: info@lvg.com · uvex-laservision.de

# Welding Protection

A new generation of welding protection eyewear available with different grey-tint lenses and various protection classes. The innovative technology affords protection from UV and infrared light while maintaining perfect colour recognition in line with uvex sunglare filters.

The special uvex infradur plus coating has anti-fog properties which prevents the inside of the lenses misting up and the extreme scratch-resistance on the outside keeps damage from welding sparks to an absolute minimum.

The welding safety eyewear fits the face perfectly and is extremely comfortable – enhancing the wearer's experience.

N.B.: Do not use for electric welding.



All welding products have polycarbonate lenses providing protection against impact as well as UV rays, IR rays and visible glare.

**The products do not provide protection against laser beams!**

For expert advice on safety and in selecting the right laser protection goggles, talk to our specialists

**laservision**

Call them on +49 (0)911 9736 8100.

**uvex-laservision.com**

# Welding Protection

uvex i-vo · uvex super fit

## Levels of welding protection and recommendations for use according to EN 169

Level of protection	Use	Gas used	Flow rate (l/h)
1.7	Protection against scattered rays for welding assistants	–	–
3	Lightweight oxyacetylene cutting	–	–
4	Welding and braze welding	Acetylene	< 70
5	Welding and braze welding Oxyacetylene cutting	Acetylene Oxygen	70 – 200 900 – 2,000
6	Welding and braze welding Oxyacetylene cutting	Acetylene Oxygen	200 – 800 2,000 – 4,000



9160.041



9160.043



9160.045

## uvex i-vo · 9160

- Comfortable welding safety spectacles
- Perfect colour recognition in line with uvex sun glare filters
- Minimises damage from welding sparks
- Soft components around the sensitive parts of the face (ears, forehead, nose)
- uvex permanent anti-fog coating on the inside of the lens
- New filter technology, UV and IR protection

Art. no.	9160.041	9160.043	9160.045
Frame	black-green	black-green	black-green
	W 166 FT CE	W 166 FT CE	W 166 FT CE
Lens	PC grey / UV 400 + IR welding shade 1.7 1.7 W 1 FTKN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 3 3 W 1 FTKN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 5 5 W 1 FTKN CE uvex infradur plus



9178.041



9178.043

## uvex super fit · 9178

- Sporty design ultra-light, safety spectacles with hinged side arms
- Perfect colour recognition in line with uvex sun glare filters
- Minimises damage from welding sparks
- uvex permanent anti-fog coating on the inside of the lens
- Outstanding protection against mechanical hazards
- New filter technology, UV and IR protection

Art. no.	9178.041	9178.043
Frame	black-green	black-green
	W 166 FT CE	W 166 FT CE
Lens	PC grey / UV 400 + IR welding shade 1.7 1.7 W 1 FTKN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 3 3 W 1 FTKN CE uvex infradur plus

## Welding Protection

uvex astrospec 2.0 · uvex futura



9164.141



9164.143



9164.144



9164.145



9164.146

### uvex astrospec 2.0 · 9164

- Iconic welding protection eyewear
- High impact-resistant polycarbonate lens with integrated side protectors
- Ventilation with labyrinth seal for a comfortable temperature
- Comfortably adapts to all face shapes due to flexible 2K side arms and inclination
- Folds flat
- Minimises welding spark damage
- Anti-fogging coating on the inside
- Perfect colour recognition in line with uvex sun glare filters
- New filter technology, UV and IR protection

<b>Art. no.</b>	9164.141	9164.143	9164.144	9164.145	9164.146
<b>Frame</b>	black-green / W 166 FT CE	black-green / W 166 FT CE	black-green / W 166 FT CE	black-green / W 166 FT CE	black-green / W 166 FT CE
<b>Lens</b>	PC grey / UV 400 + IR welding shade 1.7 1.7 W 1 FT KN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 3 3 W 1 FT KN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 4 4 W 1 FT KN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 5 5 W 1 FT KN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 6 6 W 1 FT KN CE uvex infradur plus



9180.141



9180.143



9180.144



9180.145



9180.146

### uvex futura · 9180

- Ergonomic safety spectacles with wide field of vision
- Exceptional, secure fit
- Perfect colour recognition in line with uvex sun glare filters
- uvex duo-flex side arms with 4-stage side arm length adjustment and adjustable side arm

- Integrated microratchet mechanism in ear piece
- Replaceable polycarbonate lenses
- Minimises damage from welding sparks
- New filter technology, UV and IR protection

<b>Art. no.</b>	9180.141	9180.143	9180.144	9180.145	9180.146
<b>Frame</b>	black-green / W 166 F CE	black-green / W 166 F CE	black-green / W 166 F CE	black-green / W 166 F CE	black-green / W 166 F CE
<b>Lens</b>	PC grey / UV 400 + IR welding shade 1.7 1.7 W 1 FTK CE uvex infradur	PC grey / UV 400 + IR welding shade 3 3 W 1 FTK CE uvex infradur	PC grey / UV 400 + IR welding shade 4 4 W 1 FTK CE uvex infradur	PC grey / UV 400 + IR welding shade 5 5 W 1 FTK CE uvex infradur	PC grey / UV 400 + IR welding shade 6 6 W 1 FTK CE uvex infradur
<b>Replacement lens</b>	9180.056	9180.057	9180.058	9180.059	9180.060

# Welding Protection

uvex 9116 · uvex 9104



## uvex · 9116

- Close-fitting frame design
- Anatomically shaped nose pads
- Integrated side protectors and brow guard
- Frame edge designed specifically to protect against particles from below
- Fully adjustable side arm length and inclination allows wearers to achieve an individual fit
- Adjustable Softform ear pieces
- New filter technology, UV and IR radiation protection
- Perfect colour recognition in line with uvex sun glare filters
- Minimises damage from welding sparks

Art.no.	9116.041	9116.043	9116.044	9116.045	9116.046
Frame	black-green / W 166 S CE	black-green / W 166 S CE	black-green / W 166 S CE	black-green / W 166 S CE	black-green / W 166 S CE
Lens	PC grey / UV 400 + IR welding shade 1.7 1.7 W 1 FTK CE uvex infradur	PC grey / UV 400 + IR welding shade 3 3 W 1 FTK CE uvex infradur	PC grey / UV 400 + IR welding shade 4 4 W 1 FTK CE uvex infradur	PC grey / UV 400 + IR welding shade 5 5 W 1 FTK CE uvex infradur	PC grey / UV 400 + IR welding shade 6 6 W 1 FTK CE uvex infradur



## uvex · 9104

- Close-fitting frame design, anatomically shaped nose pads
- Integrated side protectors and brow guard
- Frame edge designed specifically to protect against particles from below
- Fully adjustable side arm length and inclination allows wearers to achieve an individual fit
- Adjustable Softform ear pieces
- New filter technology, UV and IR radiation protection
- Perfect colour recognition in line with uvex sun glare filters
- Minimises damage from welding sparks
- Flip-up and easily replaceable filter

Art.no.	9104.041	9104.043	9104.044	9104.045	9104.046
Frame	black-green / W 166 S CE	black-green / W 166 S CE	black-green / W 166 S CE	black-green / W 166 S CE	black-green / W 166 S CE
Lens	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision plus	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision plus	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision plus	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision plus	PC clear / UV 400 2-1.2 W 1 FKN DIN CE uvex supravision plus
Flip-up Lens	black PC grey / UV 400 + IR welding shade 1.7 1.7 W 1 FTK CE uvex infradur	black PC grey / UV 400 + IR welding shade 3 3 W 1 FTK CE uvex infradur	black PC grey / UV 400 + IR welding shade 4 4 W 1 FTK CE uvex infradur	black PC grey / UV 400 + IR welding shade 5 5 W 1 FTK CE uvex infradur	black PC grey / UV 400 + IR welding shade 6 6 W 1 FTK CE uvex infradur
Replacement flip-up part	9104.081	9104.083	9104.084	9104.085	9104.086

# Welding Protection

## uvex 9161 · uvex super f OTG



9161.141



9161.143



9161.144



9161.145



9161.146

### uvex · 9161

- Comfortable polycarbonate welding cover spectacles
- Unrestricted peripheral vision
- Can be worn over most prescription spectacles
- Pressure-free fit through uvex duo-flex side arms
- Indirect ventilation through special side arm design with large side protectors
- 4-stage side arm length adjustment allows wearers to achieve an individual fit

- Polycarbonate lens with frosted brow guard helps protect against glare
- Minimum damage from welding sparks
- New filter technology, UV and IR radiation protection
- Perfect colour recognition in line with uvex sun glare filters
- Mechanical strength: F (45 m/s)

Art. no.	9161.141	9161.143	9161.144	9161.145	9161.146
Frame	black-green / W 166 F CE	black-green / W 166 F CE	black-green / W 166 F CE	black-green / W 166 F CE	black-green / W 166 F CE
Lens	PC grey / UV 400 + IR welding shade 1.7 1.7 W 1 FT CE uvex infradur	PC grey / UV 400 + IR welding shade 3 3 W 1 FT CE uvex infradur	PC grey / UV 400 + IR welding shade 4 4 W 1 FT CE uvex infradur	PC grey / UV 400 + IR welding shade 5 5 W 1 FT CE uvex infradur	PC grey / UV 400 + IR welding shade 6 6 W 1 FT CE uvex infradur



9169.541



9169.543



9169.545

### uvex super f OTG · 9169

- Modern protective welding cover spectacles, which fit over most prescription spectacles
- Unrestricted peripheral vision
- New side arm hinge concept with extremely soft ear pieces
- uvex permanent anti-fog coating on the inside of the lens
- Perfect colour recognition in line with uvex sun glare filters
- Outstanding protection against mechanical hazards
- Minimum damage from welding sparks
- New filter technology, UV and IR radiation protection

Art. no.	9169.541	9169.543	9169.545
Frame	black-green / W 166 FT CE	black-green / W 166 FT CE	black-green / W 166 FT CE
Lens	PC grey / UV 400 + IR welding shade 1.7 1.7 W 1 FTKN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 3 3 W 1 FTKN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 5 5 W 1 FTKN CE uvex infradur plus

# Welding Protection

## uvex carbonvision · uvex ultravision



9307.043



9307.045



9307.046

### uvex carbonvision · 9307

- Low profile wrap around style goggle
- Lightweight goggle for medium energy impact protection
- Excellent, permanent anti-fog and scratch-resistant lens coating
- Combines hard and soft components creating a soft effective seal around the eyes. Easy to clean
- High levels of dust and splash protection
- Wide fully adjustable head strap fits all head shapes – provides a secure pressure free fit. Comfortable for long-term use

- 100% UV protection
- Clear lens – suitable for virtually all light conditions and workplace environments
- uvex permanent anti-fog coating on the inside of the lens
- New filter technology, UV and IR radiation protection
- Minimum damage from welding sparks
- Perfect colour recognition in line with uvex sun glare filters

Art.no.	9307.043	9307.045	9307.046
Frame	black-black	black-black	black-black
	W 166 34 B CE	W 166 34 B CE	W 166 34 B CE
Lens	PC grey / UV 400 + IR welding shade 3 3 W 1 BKN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 5 5 W 1 BKN CE uvex infradur plus	PC grey / UV 400 + IR welding shade 6 6 W 1 BKN CE uvex infradur plus



9301.145



9301.185

### uvex ultravision · 9301

- Comfortable welding goggles with wide field of vision
- Can be worn over most prescription spectacles
- Extremely wide
- Full vision goggles
- High degree of mechanical strength: B (120 m/s)
- Continuously adjustable water-repellent headband
- Outstanding close and pressure-free fit

- Ergonomic shape
- Sophisticated ventilation system ensures exceptional wearer comfort
- Perfect colour recognition in line with uvex sun glare filters
- Lenses easily replaceable and spare lenses included
- Minimum damage from welding sparks
- New filter technology, UV and IR radiation protection

Art.no.	9301.145	Replacement lens
Frame	black-black / W 166 349 B CE	9301.185
	PC grey / UV 400 + IR	-
Lens	welding shade 5 5 W 1 B KN uvex infradur plus	PC grey / UV 400 + IR welding shade 5 5 W 1 B KN uvex infradur plus

# Welding Protection

## uvex ultrasonic flip-up · uvex 9350



9302.043



9302.045



### uvex ultrasonic flip-up · 9302

- Sporty design and wide panoramic field of vision
- High degree of mechanical strength: B (120 m/s)
- High level of protection for professional welders
- Comprehensive side protection around the eye area, even when worn over prescription spectacles
- Perfect colour recognition in line with uvex sun glare filters
- Indirect ventilation ensures pleasant interior environment
- New filter technology, UV and IR radiation protection
- Flip-up welding lens which can easily be replaced
- Minimum damage from welding sparks
- Can be worn over most prescription spectacles
- Soft materials aid compatibility with respirators and other items of PPE

<b>Art. no.</b>	9302.043	9302.045
<b>Frame</b>	green-black	green-black
<b>Lens</b>	W 166 349 B CE PC clear / UV 400 2-1.2 W 1 B9 KN DIN CE uvex supravision excellence	W 166 349 B CE PC clear / UV 400 2-1.2 W 1 B9 KN DIN CE uvex supravision excellence
<b>Flip-up</b>	PC grey / UV 400 + IR welding shade 3 3 W 1 CE uvex infradur	PC grey / UV 400 + IR welding shade 5 5 W 1 CE uvex infradur
<b>Replacement lens flip-up</b>		
<b>Art. no.</b>	9302.083	9302.085
<b>Lens</b>	PC grey / UV 400 + IR welding shade 3 3 W 1 CE uvex infradur	PC grey / UV 400 + IR welding shade 5 5 W 1 CE uvex infradur



9350.035

### uvex · 9350

- Wide-vision welding goggles with flip-up filter holder
- Maximum wearer comfort through close-fitting frame
- Easily adjustable headband
- Indirect ventilation system

<b>Art. no.</b>	9350.035	9350.050
<b>Frame</b>	black / W 166 3 4 FT CE	black / W 166 3 4 FT CE
<b>Lens</b>	CA clear 2-1.2 GW 1 F N CE	CA clear 2-1.2 GW 1 F N CE
<b>Flip-up</b>	black	green, welding shade 5 5 SCS 1 DIN 01960 CE
<b>Lens</b>	green, welding shade 5 5 SCS 1 DIN 01960 CE	green, welding shade 5 5 SCS 1 DIN 01960 CE
<b>Replacement lenses for basic version</b>		Replacement lenses for flip-up
<b>Art. no.</b>		9140.065
<b>Lens</b>		green, welding shade 5 5 SCS 1 DIN 01960 CE

# Accessories

## uvex cleaning accessories



9970.002



9963.000

### uvex cleaning station

- Plastic eyewear cleaning station for wall mounting
- Replaceable plastic pump
- Easy to use
  - Simple eyewear cleaning process
  - Increased safety through cleanliness
  - Extends life of eyewear
- Refillable with silicone-free cleaning tissues and uvex cleaning fluid

Art. no.	9970.002
includes	2 x 9971.000
	1 x 9972.100
	1 x 9973.100

**uvex 9973.100**

Plastic pump for uvex cleaning solution  
9972.100.

Art. no.	9973.100
	Plastic pump

**uvex 9972.100**

0.5 l cleaning solution.  
Suitable for all lenses!

Art. no.	9972.100
Content	500 ml

**uvex 9971.000**

Refill pack of silicone-free cleaning tissues,  
approx. 700 sheets. Suitable for all lenses!  
Antistatic.

Art. no.	9971.000
Content	approx. 700 sheets



9973.100



9972.100



9971.000



9963.001

### uvex cleaning towelettes

- 100 per box
- Silicone-free
- Not anti-static
- Individually wrapped – ideal for cleaning eyewear on the go
- For all uvex eyewear lenses

Art. no.	9963.000
----------	----------

Wall holder for cleaning towelettes including mounting accessories

Art. no.	9963.001
----------	----------

# Accessories


## uvex eyewear straps and uvex hang-cords



9958.006



9958.003

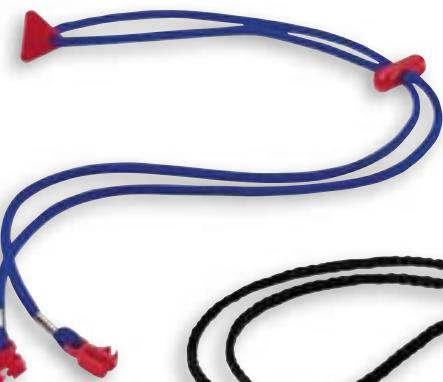

9959.003



9959.002

### uvex eyewear headbands

#### uvex 9958.006

- Features a stopper for individual size adjustment
- Metal-free

Art.no. 9958.006

#### uvex 9958.003

- Continuously adjustable headband
- Metal-free

Art.no. 9958.003

### uvex eyewear cord

#### uvex 9959.003

- Eyewear cord
- For all uvex duo-flex side arms
  - For all soft temples (uvex skyper models)

Art.no. 9959.003

#### uvex 9959.002

- Cord for all uvex spectacles

Art.no. 9959.002

### uvex pheos headband

- Eyewear headband to attach to uvex pheos/uvex pheos s side arms
- Metal-free
- Individual size adjustment

see page 27

Art.no. 9958.020  
Colour grey-black

### uvex eyewear cord

#### Eyewear cord

- For uvex 9192, 9172, 9160, 9195, 9196, 9197, 9175, 9174, 9188 models
- Metal-free
- Individual size adjustment

Art.no. 9959.004  
Colour black

## Accessories

uvex safety eyewear cases



9954.600

### uvex spectacles case

- Hard shell case with modern design
- Extremely robust construction protects from external impact
- Soft interior
- Belt buckle fastening
- Practical snap hook
- Specially designed for goggles with strong curvature (e.g. uvex i-vo)

Art.no. 9954.600  
Colour black



9954.500

### uvex spectacles case

- Extremely robust case
- Reinforced zipper
- Belt loop
- Additional space for spare lenses
- Suitable for all uvex spectacles (except 9169)

Art.no. 9954.500  
Colour black



9954.501

### uvex goggles case

- Goggle case with zipper and belt loop
- Extremely large, robust case
- Additional space for spare lenses
- Suitable for uvex goggles and spectacles

Art.no. 9954.501  
Colour black

# Accessories

## uvex safety eyewear cases



6118.002



9954.650

### uvex spectacles case

- Flexible robust nylon case
- Case can be extended by zipper on side (6118.002 only)
- Suitable for all uvex spectacles
- Adjustable velcro fastening
- With belt loop

<b>Art.no.</b>	6118.002
<b>Colour</b>	black for all uvex safety spectacles

<b>Art.no.</b>	9954.650
<b>Colour</b>	black for safety goggles uvex 9308 and uvex 9307



9954.355

9954.360

### uvex safety eyewear case

#### uvex 9954.355

- Elegant microfibre bag
- Suitable for all uvex spectacles

<b>Art.no.</b>	9954.355
<b>Colour</b>	black for safety spectacles

#### uvex 9954.360

- Elegant microfibre bag
- Suitable for uvex overspecs and goggles

<b>Art.no.</b>	9954.360
<b>Colour</b>	black for safety goggles



9957.502

### uvex SECU Box

- Hard shell case for wall mounting
- Suitable for uvex goggles and spectacles
- 2 pairs of goggles, or
- 3 pairs of spectacles, or
- 1 pair goggles and 2 pairs of spectacles

<b>Art.no.</b>	9957.502
<b>Colour</b>	blue

# Safety Eyewear

## Overview

Model	Name	Product	Retail unit	Page	uvex supravision excellence	uvex supravision extreme	uvex supravision clean	uvex supravision sapphire	uvex supravision plus	ETC (extreme)	uvex AR (anti-reflective)	uvex supravision varomatic	silver mirror	blue mirror	uvex infradur	uvex infradur plus	CA uncoated	CA anti-fog	scratch-resistant	scratch-resistant + anti-fog	hardened glass
9104	uvex 9104	Safety spectacles – welding protection	5	52					■						■						
9104	uvex 9104	Replacement flip-up part	1	52											■						
9116	uvex 9116	Safety spectacles – welding protection	5	52											■						
9130	uvex cosmoflex	Plastic temple spectacles	5	37		■													■		
9134	uvex meteor	Plastic temple spectacles	5	37		■															
9148	uvex 9148	Metal temple spectacles	5	39		■															
9149	uvex 9149	Metal temple spectacles	5	39		■															
9153	uvex racer MT	Metal temple spectacles	5	38					■										■		
9155	uvex mercury	Metal temple spectacles	5	39		■															
9159	uvex winner	Metal temple spectacles	5	38														■	■		
9160	uvex i-vo	Plastic temple spectacles	5	30	■		■														
9160	uvex i-vo	Replacement lenses	5	30	■		■														
9160	uvex i-vo	Safety spectacles – welding protection	5	50											■						
9161	uvex 9161	Plastic temple spectacles	12	41		■	■														
9161	uvex 9161	Safety spectacles – welding protection	12	53											■						
9163	uvex astroflex	Plastic temple spectacles	5	34	■																
9164	uvex astrospec 2.0	Plastic temple spectacles	5	25	■	■		■	■												
9164	uvex astrospec 2.0	Safety spectacles – welding protection	5	51												■					
9168	uvex astrospec	Plastic temple spectacles	5	34	■		■														
9168	uvex astrospec	Replacement lenses	5	34	■		■														
9169	uvex super OTG	Plastic temple spectacles	5	41	■		■														
9169	uvex super f OTG	Plastic temple spectacles	5	41			■														
9169	uvex super f OTG	Plastic temple spectacles	1	41										■							
9169	uvex super f OTG 525	Plastic temple spectacles, UV 525	1	41			■														
9169	uvex super f OTG CR	Plastic temple spectacles	5	31/41			■														
9169	uvex super f OTG	Safety spectacles – welding protection	5	53												■					
9172	uvex super g	Plastic temple spectacles	5	28	■		■	■						■							
9172	uvex super g	Replacement lens	5	28	■																
9174	uvex skylite	Plastic temple spectacles	5	35				■													
9175	uvex skyguard NT	Plastic temple spectacles	5	35	■	■															
9177	uvex x-trend	Plastic temple spectacles	5	35	■																
9178	uvex super fit	Plastic temple spectacles	5	29	■		■	■	■												
9178	uvex super fit ETC	Plastic temple spectacles	5	29										■							
9178	uvex super fit CR	Plastic temple spectacles	5	29/31			■														
9178	uvex super fit	Safety spectacles – welding protection	5	50												■					
9180	uvex futura	Plastic temple spectacles	5	37			■	■													
9180	uvex futura	Replacement lenses	5	37			■	■													
9180	uvex futura	Safety spectacles – welding protection	5	51												■					
9180	uvex futura	Replacement lenses – welding protection	5	51												■					
9182	uvex futura	Plastic temple spectacles	5	37			■														
9182	uvex futura	Replacement lenses	5	37			■														
9188	uvex cybric	Plastic temple spectacles	5	40			■	■							■						
9188	uvex cyberguard	Plastic temple spectacles	5	40				■													
9190	uvex i-3	Plastic temple spectacles	5	23	■		■	■	■		■		■								
9190	uvex i-3	Plastic temple spectacles	1	23										■							
9190	uvex i-3	Replacement lens	5	23	■																



Model	Name	Product	Retail unit	Page	uvex supravision excellence	uvex supravision extreme	uvex supravision clean	uvex supravision sapphire	uvex supravision plus	ETC (extreme)	uvex AR (anti-reflective)	uvex supravision varomatic	silver mirror	blue mirror	uvex infradur	uvex infradur plus	CA uncoated	CA anti-fog	scratch-resistant	scratch-resistant + anti-fog	hardened glass
9192	uvex pheos/uvex pheos s	Plastic temple spectacles	5	26/27	■	■							■								
9192	uvex pheos guard	uvex pheos headband version	4	27		■															
9192	uvex pheos/uvex pheos s	Extra frame	20	27																	
9193	uvex sportstyle	Plastic temple spectacles	5	21		■															
9195	uvex skyper	Plastic temple spectacles	5	32	■				■												
9195	uvex skyper	Replacement lenses	5	32	■	■			■												
9196	uvex skyper s	Plastic temple spectacles	5	32	■	■			■												
9197	uvex skyper sx2	Plastic temple spectacles	5	33	■	■			■												
9197	uvex skyper sx2	Replacement lens	5	33					■												
9197	uvex skybrite sx2	Plastic temple spectacles	5	33	■							■									
9231	uvex polavision	Plastic temple spectacles	1	40														■			
9301	uvex ultravision	Safety goggles	10	46	■				■									■			
9301/9300	uvex ultravision	Replacement lenses	5	46	■													■			
9301	uvex ultravision faceguard	Safety goggles	1	47	■																
9301	uvex ultravision	Mouth shield	1	47	■																
9301	uvex ultravision	Safety goggles – welding protection	10	54													■				
9302	uvex ultrasonic	Safety goggles	4	45	■	■															
9302	uvex ultrasonic	Replacement lenses	5	45	■																
9302	uvex ultrasonic CR	Safety goggles	4	31			■														
9302	uvex ultrasonic flip-up	Safety goggles – welding protection	4	55	■											■					
9302	uvex ultrasonic flip-up	Replacement lenses – welding protection	5	55												■					
9305	uvex 9305	Safety goggles	12	47													■				
9307	uvex carbonvision	Safety goggles	5	44		■															
9307	uvex carbonvision	Safety goggles – welding protection	5	54												■					
9308	uvex u-sonic	Safety goggles	5	43	■	■			■												
9308	uvex u-sonic	Add-on lens	5	43			■														
9308	uvex u-sonic	Replacement lenses	5	43	■																
9350	uvex 9350	Safety goggles – welding protection	10	55												■		■		■	
9350	uvex 9350	Replacement lenses	5	55												■		■		■	
9405	uvex 9405	Safety goggles	12	47													■				
9400	uvex 9405	Replacement lens	5	47													■				
6118		Safety eyewear case	1	59																	
9954		Safety eyewear cases	5	58/59																	
9954		Microfibre case	5	59																	
9957		SECU box	1	59																	
9958		Headband for uvex temple spectacles	10	57																	
9959		Neck hang cord for uvex spectacles	10	57																	
9963		Cleaning towelettes	5	56																	
9970		Cleaning station	1	56																	
9971		Replacement cleaning papers	1	56																	
9972		Cleaning fluid	1	56																	
9973		Plastic pump	1	56																	

# Applications

## Always the perfect solution

Mechanical risk	Chemical risk	Optical risk		
Working conditions	Eyewear model	Lens material	Lens tinting	Coating
Light and precision engineering	Spectacles	HG PC	clear	uvex supravision plus uvex supravision sapphire uvex supravision excellence
Assembly, maintenance	Spectacles	HG PC	clear	uvex supravision plus uvex supravision sapphire uvex supravision excellence
Grinding, angle grinding	Spectacles, Goggles	HG VG PC	clear	uvex supravision sapphire uvex supravision excellence uvex supravision variomatic
Turning Milling	Spectacles	HG PC	clear	uvex supravision plus uvex supravision sapphire uvex supravision excellence
Dusty environments	Goggles	PC	clear	uvex supravision excellence uvex supravision extreme
Foundry cleaning	Goggles	PC	clear	uvex supravision excellence uvex supravision extreme
Forestry and agriculture	Spectacles	PC	clear amber	uvex supravision excellence uvex supravision extreme
Laboratory	Spectacles Goggles	HG PC	clear light blue	uvex supravision sapphire uvex supravision excellence uvex supravision plus
Working with acids and galvanic media	Goggles	PC CA	clear	uvex supravision excellence uvex supravision extreme
Spot welding, soldering	Spectacles, Goggles	G PC	welding shade grey	uvex infradur uvex infradur plus
Oxygene cutting Gas welding, braze welding Welders assistant	Spectacles, Goggles	G PC	welding shade grey	uvex infradur uvex infradur plus
Foundries	Spectacles	G PC	welding shade grey	uvex infradur uvex infradur plus
Furnaces	Spectacles, Goggles	G PC	welding shade grey	uvex infradur uvex infradur plus
Outdoors – sunglare	Spectacles	PC	grey brown silver mirror	uvex supravision excellence uvex supravision extreme uvex supravision plus uvex supravision sapphire
Offshoring/maritime	Spectacles	PC	uvex variomatic uvex polavision	uvex supravision variomatic uvex polavision
Strong lighting, glare, mixed lighting	Spectacles	PC	clear light blue	uvex supravision AR (anti-reflective)
Working conditions under short-wave blue light up to 525 nm	Overspecs	PC	orange	uvex supravision sapphire
Sterile working conditions	Spectacles, Goggles	PC	clear	uvex supravision clean
Plant visitors	Spectacles, Overspecs	PC	clear	uvex supravision excellence uvex supravision plus uvex supravision sapphire uncoated